

**Kawasaki Robot  
RS025**

**Installation and  
Connection Manual**

**Robot**

Kawasaki Heavy Industries, Ltd.

## Preface

This manual describes installation and connection procedures for Kawasaki Robot RS025.

Be sure to fully understand the content of this manual and pay attention to the safety items in this manual and the separate "Safety Manual" when performing an operation. Note that this manual only provides descriptions of the installation and connection procedures for the arm. Also see the "Installation and Connection Manual" for the controller.

Again, do not perform any kind of work until you fully understand all of the contents of this manual. Also, Kawasaki is not responsible for damages or problems that occur as a result of performing work after referring to specific pages only.

This manual is applicable to the following robot arm.

RS025N, RS025S

- 
1. This manual does not constitute a guarantee of the systems in which the robot is utilized. Accordingly, Kawasaki is not responsible for any accidents, damages, and/or problems relating to industrial property rights as a result of using the system.
  2. It is recommended that all personnel assigned for activation of operation, teaching, maintenance or inspection of the robot attend the necessary education/training course(s) prepared by Kawasaki, before assuming their responsibilities.
  3. Kawasaki reserves the right to change, revise, or update this manual without prior notice.
  4. This manual may not, in whole or in part, be reprinted or copied without the prior written consent of Kawasaki.
  5. Store this manual with care and keep it available for use at any time. If the robot is reinstalled or moved to a different site or sold off to a different user, attach this manual to the robot without fail. In the event the manual is lost or damaged severely, contact Kawasaki.

---

Copyright © 2022 Kawasaki Heavy Industries, Ltd. All rights reserved.

## Symbols

The items that require special attention in this manual are designated with the following symbols.

Ensure proper and safe operation of the robot and prevent physical injury or property damages by complying with the safety matters given in the boxes with these symbols.

 **DANGER**

**Failure to comply with indicated matters can result in imminent injury or death.**

 **WARNING**

**Failure to comply with indicated matters may possibly lead to injury or death.**

 **CAUTION**

**Failure to comply with indicated matters may lead to physical injury and/or mechanical damage.**

**[NOTE]**

Denotes precautions regarding robot specification, handling, teaching, operation, and maintenance.

 **WARNING**

1. **The accuracy and effectiveness of the diagrams, procedures, and detail explanations given in this manual cannot be confirmed with absolute certainty. Accordingly, it is necessary to give one's fullest attention when using this manual to perform any work.**
2. **Safety related contents described in this manual apply to each individual work and not to all robot work. In order to perform every work in safety, read and fully understand the "Safety Manual," all pertinent laws, regulations and related materials as well as all the safety explanation described in each chapter, and prepare safety measures suitable for actual work.**

## Table of Contents

|  |    |
|--|----|
| Preface .....  | i  |
| Symbols .....  | ii |
| 1    Precautions .....   | 1  |
| 1.1    Precautions during Transportation, Installation and Storage .....           | 1  |
| 1.2    Installation Environment .....  | 2  |
| 1.3    Residual Risk When Operating .....  | 3  |
| 2    Arm Installation and Connection Work Flow .....                               | 4  |
| 3    Motion Range and Specifications .....   | 5  |
| 3.1    Determination of Safety Fence Installation Location from Motion Range ..... | 5  |
| 3.2    Motion Range and Specifications .....                                       | 6  |
| 3.3    Mechanical stopper .....  | 8  |
| 4    Transportation Methods .....  | 10 |
| 4.1    Wire Suspension (Without Base Plate) .....                                  | 10 |
| 4.2    Wire Suspension (With Base Plate) .....                                     | 11 |
| 5    Base Installation Dimensions .....  | 12 |
| 6    Installation Method of Robot Pedestal .....                                   | 13 |
| 7    Installation Method .....   | 14 |
| 7.1    Installing the Base Directly on the Floor .....                             | 14 |
| 7.2    Installing the Robot Pedestal on the Floor .....                            | 15 |
| 7.3    Installing the Robot Base Plate on the Floor (Without Pedestal) .....       | 16 |
| 7.4    Installing the Robot Base Plate on the Floor (With Pedestal) .....          | 17 |
| 8    Installation of Tools .....   | 18 |
| 8.1    Wrist Tip (Flange Surface) Dimensions .....                                 | 18 |
| 8.2    Mounting Bolt Specifications .....  | 18 |
| 8.3    Load Capacity .....   | 19 |
| 9    Mounting External Equipment .....   | 21 |
| 9.1    Service Tapped Hole Positions .....   | 21 |
| 9.2    Calculation of Load Caused by External Equipment .....                      | 23 |
| 10    Connection of Air System .....   | 25 |
| 10.1    Air Piping .....   | 25 |
| 10.2    Air Supply to the Robot Arm .....  | 27 |
| 10.3    Tubing from Air Outlet to Hand .....                                       | 29 |
| Appendix 1    Stopping Performance of Robot .....                                  | 30 |

## 1 Precautions

### 1.1 Precautions during Transportation, Installation and Storage

When transporting the Kawasaki Robot to its installation site, strictly observe the following cautions.



#### WARNING

1. When the robot arm is to be transported by using a crane or forklift, never support the robot arm manually.
2. During transportation, never climb on the robot arm or stay under the hoisted robot arm.
3. Prior to installation, turn OFF the controller power switch and the external power switch for shutting down power supply to the controller. Display signs indicating clearly “Inspection and maintenance is in progress”, and lock out/tag out the external power switch to prevent accidents of electric shock etc. caused when someone accidentally turns ON the power.
4. Prior to moving robot, ensure safety by first confirming no abnormality is observed in installing condition, etc., and then turn ON motor power to set robot to the desired pose. Be careful not to be caught by/between any moving parts due to careless approach to robot and peripheral equipment. After setting robot to the specified pose, turn OFF the controller power and the external power switch again as mentioned above. Display signs indicating clearly “Inspection and maintenance is in progress,” and lock out/tag out the external power switch before starting installation and connection.




#### CAUTION

1. Since the robot arm is composed of precision parts, be careful not to apply excessive shocks or vibrations during transportation.
2. Prior to installation, remove all obstacles so the installation is carried out smoothly and safely. Clear a passage to the installation area for transportation of the robot arm using a crane or forklift.
3. During transportation and storage,
  - (1) Keep the ambient temperature within the range of -10 to 60°C,
  - (2) Keep the relative humidity within the range of 35 to 85% RH without dew condensation,
  - (3) Keep free from excessively strong vibration.

## 1.2 Installation Environment

The robot arm must be installed in a place that satisfies all the following environmental conditions:

1. When robot is installed on the floor, the levelness must be within  $\pm 5^\circ$ .
2. Be sure that the installation floor/pedestal has sufficient rigidity.
3. Secure a flatness to prevent undue force applied to the installation section. (If sufficient flatness is unobtainable, insert liners and adjust the flatness.)
4. Keep the ambient temperature during operation within the range of 0 to 45°C. (Starting in low temperatures increases the viscosity of grease and oil, which can lead to deviation errors and excess loads. In such cases, move the robot at low speeds before operating.)
5. Keep the relative humidity during operation within the range of 35 to 85%RH without dew condensation.
6. The robot installing place should be free from dust, dirt, oil, smoke, water, and other foreign matters.
7. The robot installing place should be free from flammable or corrosive liquid or gas.
8. The robot installing place should be free from excessively strong vibration. (0.5 G or less)
9. The robot installing place should be free from electric noise interference.
10. The robot installing place should be sufficiently larger than the motion range of robot arm.
  - (1) Install safety fence so the maximum movement of fully equipped robot arm (with hand and gun) does not cause interference.
  - (2) Minimize the number of entrance gates (only one is best) and equip the entrance gate with a safety plug.
  - (3) Observe the requirements of ISO 10218, etc. established in each region for details of the safety fence.

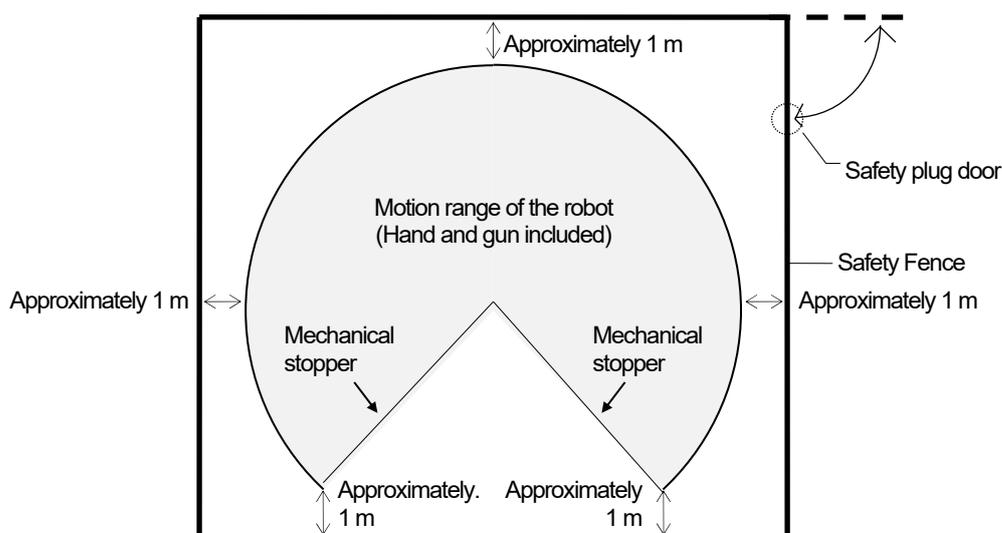

### 1.3 Residual Risk When Operating


**!** **WARNING**  
Pay attention to the residual risk areas described in the figures below during operation.



Catching danger areas




Electric shock danger areas

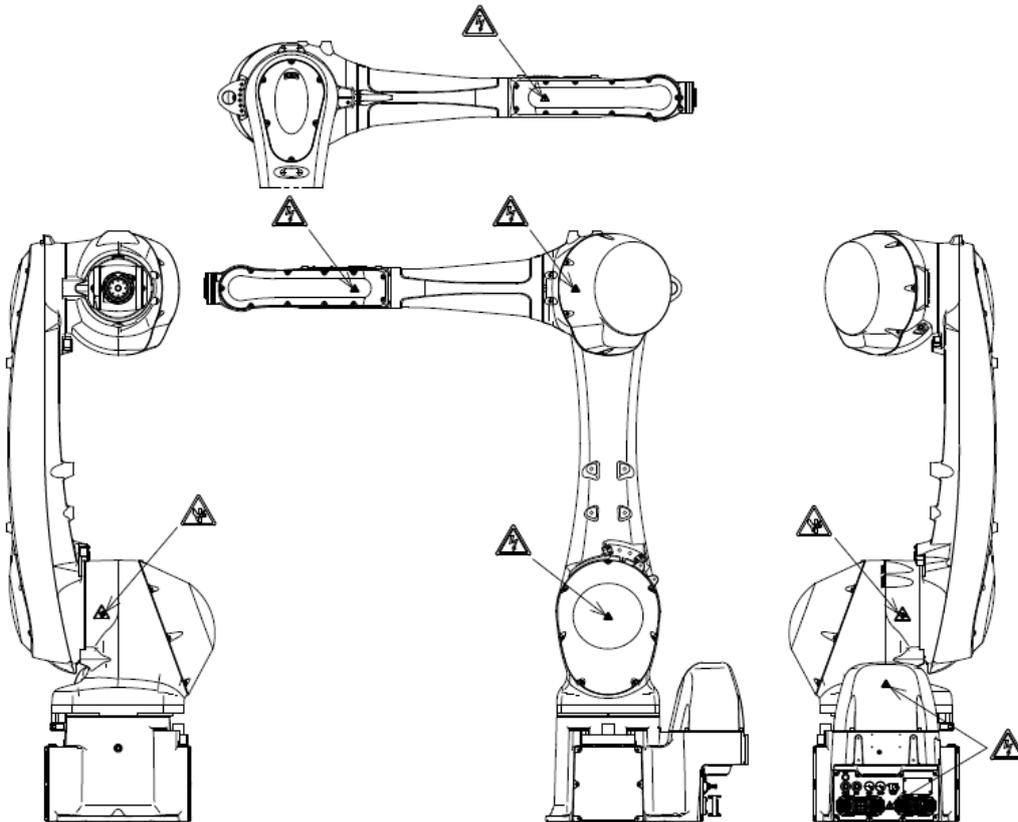


## 2 Arm Installation and Connection Work Flow

This workflow describes only the robot arm section. For the controller, refer to “Installation and Connection Manual” for controller.

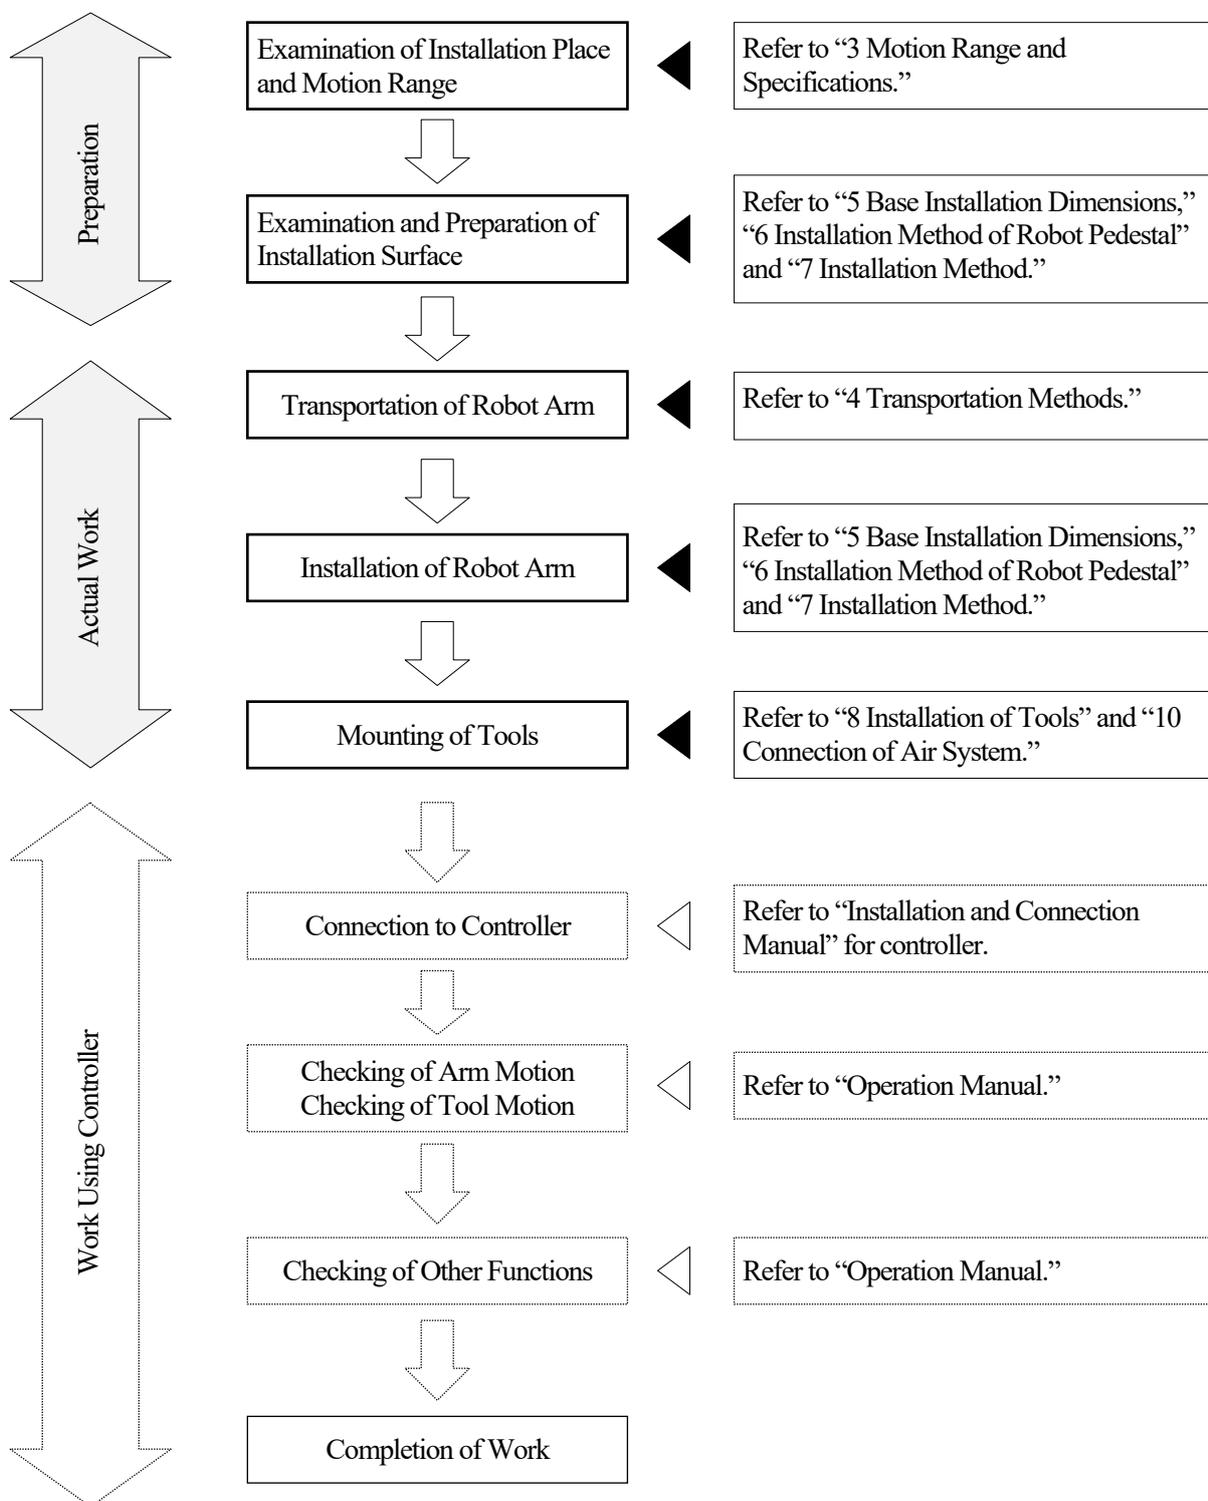


### 3 Motion Range and Specifications

#### 3.1 Determination of Safety Fence Installation Location from Motion Range

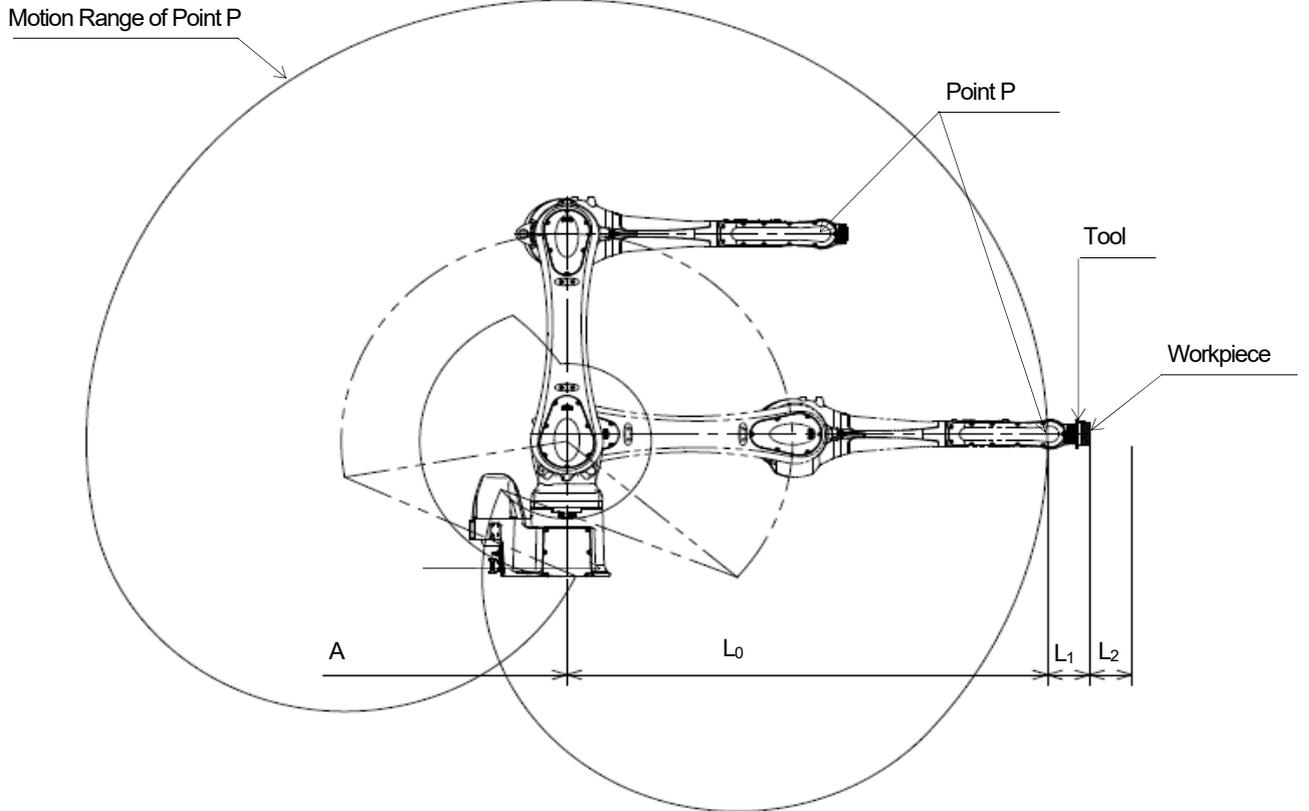


The motion range of the robot is represented by the maximum area that can be covered by point P in the figure above. Therefore, as shown in the figure below, install the safety fence outside circle whose radius is  $L_0+L_1+L_2$ . Where;  $L_0$  is the length from the center line of arm (point A shown above) to the farthest point of P,  $L_1$  is the length from point P to the farthest point of wrist flange, tool and workpiece, and  $L_2$  is safety margin. For the length of  $L_0$ , refer to the drawings in “3.2 Motion Range and Specifications.”

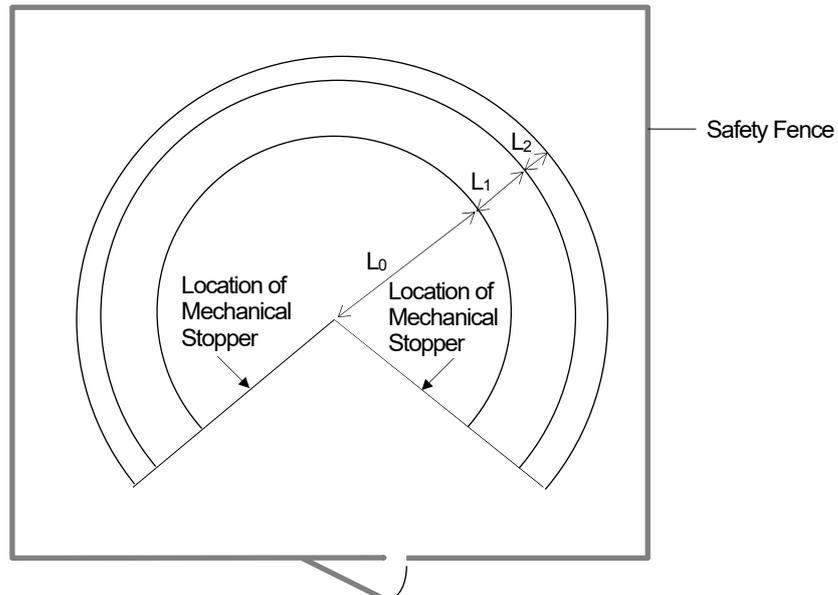

### 3.2 Motion Range and Specifications

RS025N

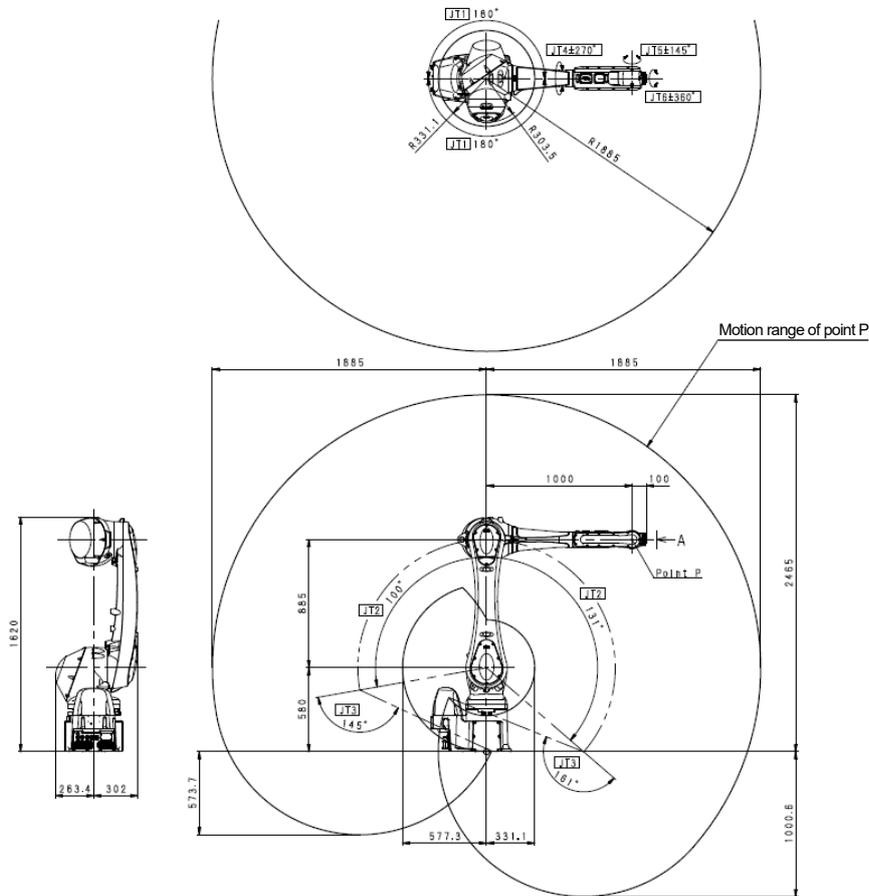


| Model                          | Vertically articulated robot |                       |                       |
|--------------------------------|------------------------------|-----------------------|-----------------------|
| Degree of Freedom of Motion    | 6                            |                       |                       |
| Motion Range and Maximum Speed | JT                           | Motion Range          | Maximum Speed*1       |
|                                | 1                            | ±180°                 | 215°/s                |
|                                | 2                            | +131 to -100°         | 215°/s                |
|                                | 3                            | +145 to -161°         | 270°/s                |
|                                | 4                            | ±270°                 | 420°/s                |
|                                | 5                            | ±145°                 | 420°/s                |
| 6                              | ±360°                        | 780°/s                |                       |
| Maximum Payload                | 25 kg                        |                       |                       |
| Wrist Load Capacity            | JT                           | Torque                | Moment of Inertia     |
|                                | 4                            | 60.0 N·m              | 2.6 kg·m <sup>2</sup> |
|                                | 5                            | 60.0 N·m              | 2.6 kg·m <sup>2</sup> |
| 6                              | 32.0 N·m                     | 1.3 kg·m <sup>2</sup> |                       |
| Repeated Positional Accuracy   | ±0.04 mm                     |                       |                       |
| Mass                           | 270 kg                       |                       |                       |
| Acoustic noise                 | 66 dB (A)*2                  |                       |                       |

\*1 The values in the table are maximum values and vary depending on conditions such as load and motion range.

\*2 Measurement conditions  
 · Equivalent to ISO 11201  
 · Reference operation in Kawasaki

The acoustic noise level depends on robots, loads and operation conditions, and it may exceed 80 dB depending on the application motion such as moving a single axis at the maximum speed. Protect personnel from noise as necessary.

RS025S

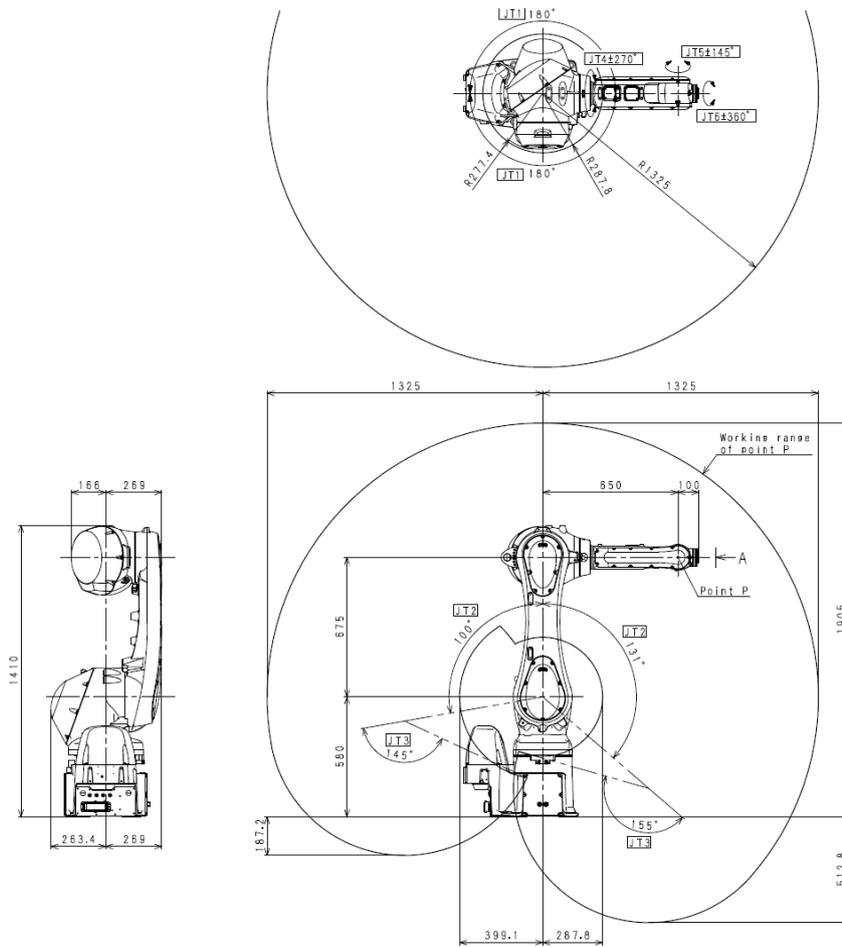

|                                |                              |                       |                       |
|--------------------------------|------------------------------|-----------------------|-----------------------|
| Model                          | Vertically articulated robot |                       |                       |
| Degree of Freedom of Motion    | 6                            |                       |                       |
| Motion Range and Maximum Speed | JT                           | Motion Range          | Maximum Speed*1       |
|                                | 1                            | ±180°                 | 215°/s                |
|                                | 2                            | +131 to -100°         | 215°/s                |
|                                | 3                            | +145 to -155°         | 270°/s                |
|                                | 4                            | ±270°                 | 290°/s                |
|                                | 5                            | ±145°                 | 410°/s                |
| 6                              | ±360°                        | 730°/s                |                       |
| Maximum Payload                | 25 kg                        |                       |                       |
| Wrist Load Capacity            | JT                           | Torque                | Moment of Inertia     |
|                                | 4                            | 70.0 N·m              | 2.8 kg·m <sup>2</sup> |
|                                | 5                            | 70.0 N·m              | 2.8 kg·m <sup>2</sup> |
| 6                              | 42.0 N·m                     | 1.4 kg·m <sup>2</sup> |                       |
| Repeated Positional Accuracy   | ±0.04 mm                     |                       |                       |
| Mass                           | 265 kg                       |                       |                       |
| Acoustic noise                 | 66 dB (A)*2                  |                       |                       |

\*1 The values in the table are maximum values and vary depending on conditions such as load and motion range.


\*2 Measurement conditions  
 · Equivalent to ISO 11201  
 · Reference operation in Kawasaki

The acoustic noise level depends on robots, loads and operation conditions, and it may exceed 80 dB depending on the application motion such as moving a single axis at the maximum speed. Protect personnel from noise as necessary.


### 3.3 Mechanical stopper

Mechanical stoppers are installed at the positions shown in the figure below on base axes JT1, JT2, and JT3.

RS025N

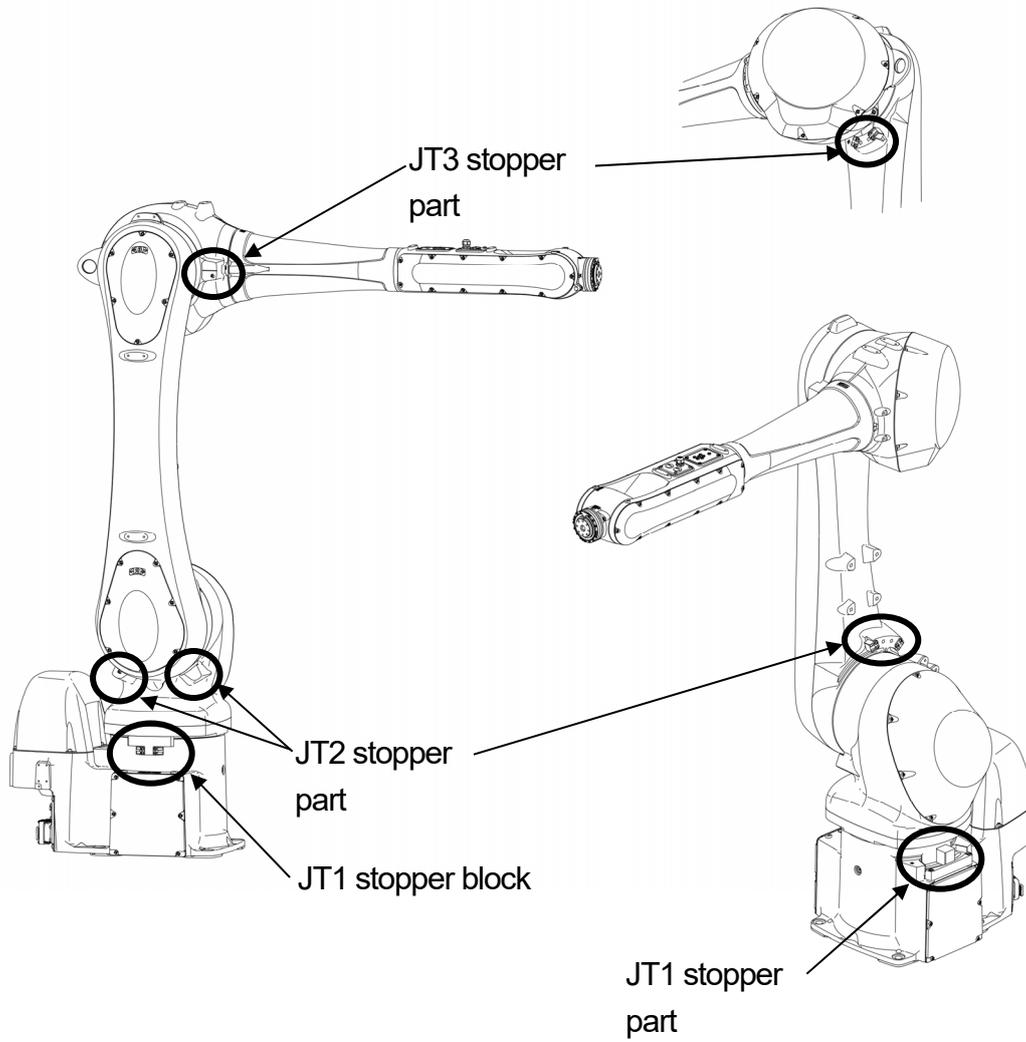

RS025S

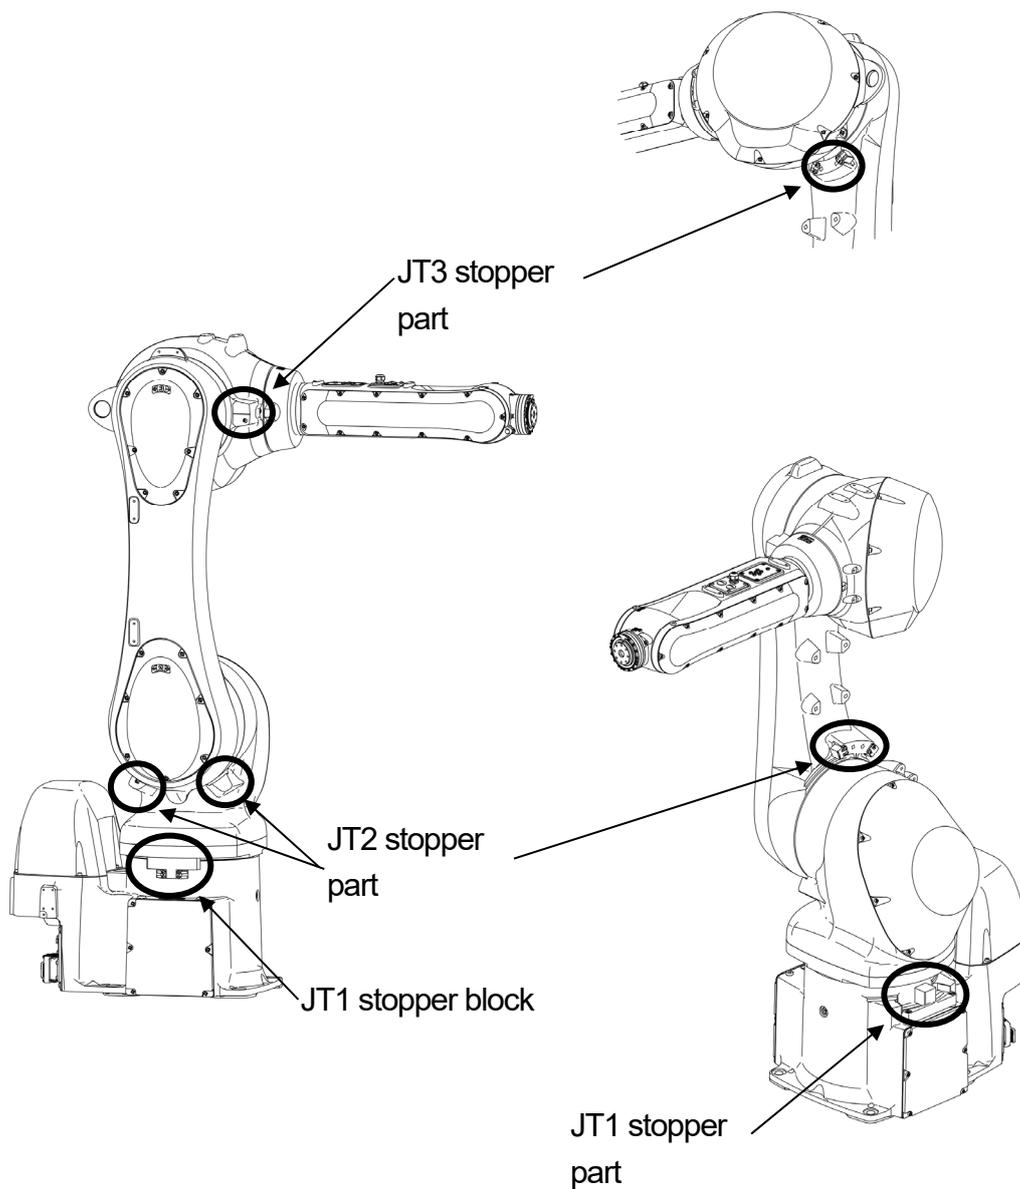

## 4 Transportation Methods

### 4.1 Wire Suspension (Without Base Plate)



Mount an hoisting plate to the arm as shown in the figure below, and hoist up the robot by fastening wires to it. (Follow the same procedures when attaching to a pedestal.)

**⚠ WARNING**

**Be sure to wrap the wire around the robot as shown in the figure below when hoisting up the robot.**

**⚠ CAUTION**

**When hoisting the robot, care is required as it may tip forward or back depending on its posture or how the various options are installed. If the robot is suspended while at an angle, shocks may result in swinging or damage; wires may catch on the harness or piping; and external parts may cause interference resulting in damage. After transport is completed, remove the hoisting plate attached to the robot arm.**
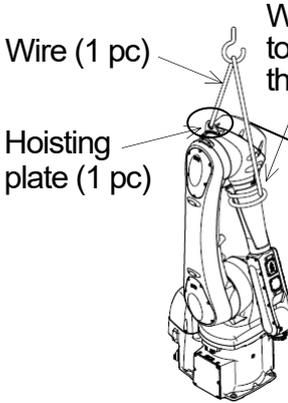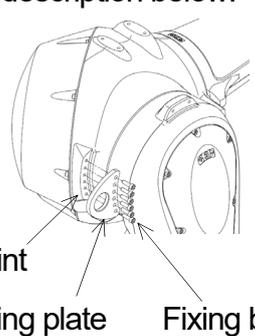
| Model                         |       | RS025  |  |
|-------------------------------|-------|--|--|
| Suspended posture             |       |  <p>Wire (1 pc)</p> <p>Hoisting plate (1 pc)</p> <p>Wrap the wire around to prevent that the robot rotates.</p> | <p>For installation of hoisting plate, refer to the description below.</p>  <p>Installation point</p> <p>Hoisting plate</p> <p>Fixing bolts</p> |
|                               |       |  |  |
| Lifting posture               | Model | RS025N   | RS025S   |
|                               | JT1   | 0°   | 0°   |
|                               | JT2   | 0°   | 0°   |
|                               | JT3   | -161°  | -155°  |
|                               | JT4   | 0°   | 0°   |
|                               | JT5   | -19°   | -20°   |
| JT6                           | 0°    | 0°   |  |
| Part number of hoisting plate |       | 60339-9835   |  |
| Hoisting plate Fixing bolts   |       | M6 × 6 pcs   |  |

## 4.2 Wire Suspension (With Base Plate)

Mount four eyebolts to the base plate and fasten wires to them as shown in the figure below. To prevent the robot from falling, also mount to the hoisting plate to the arm and hoist it up by fastening wires to it. (Follow the same procedures when attaching to a pedestal.)



### ⚠ CAUTION

When suspending the robot, care is required as it may tip forward or back depending on its posture or how the various options are installed. If the robot is suspended while at an angle, shocks may result in swinging or damage; wires may catch on the harness or piping; and external parts may cause interference resulting in damage. After transport is completed, remove the hoisting plate attached to the robot arm.

| Model                         |   | RS025      |        |
|-------------------------------|---|------------|--------|
| Suspended posture             |   |            |        |
|                               | For installation of hoisting plate, refer to the description below. |            |        |
| Lifting posture               | Model   | RS025N     | RS025S |
|                               | JT1   | 0°         | 0°     |
|                               | JT2   | 0°         | 0°     |
|                               | JT3   | -161°      | -155°  |
|                               | JT4   | 0°         | 0°     |
|                               | JT5   | -19°       | -20°   |
| JT6                           | 0°  | 0°         |        |
| Part number of hoisting plate |   | 60339-9835 |        |
| Hoisting plate Fixing bolts   |   | M6 × 6 pcs |        |
| Base plate part number        |   | 60360-1203 |        |



## 5 Base Installation Dimensions

Use the bolt holes and fix with high tensile strength bolts during base installation.
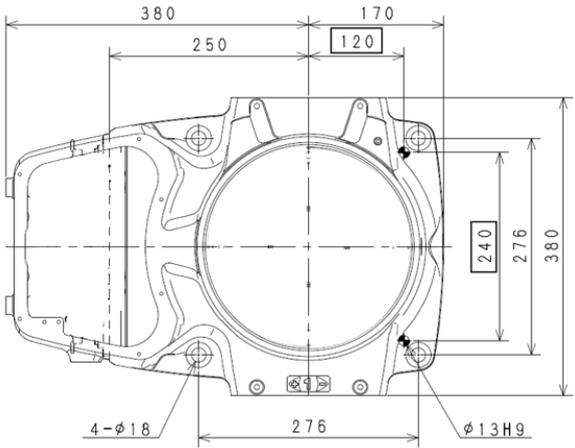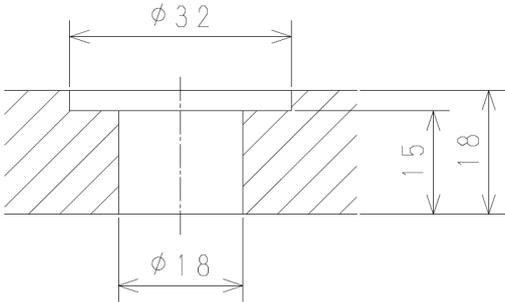
|  |  |
|--|--|
| Model                                      | RS025N, RS025S   |
| Dimensions of the installed part           |    |
| Cross-section figure of the installed part |  |
| Bolt hole                                  | 4-φ18  |
| High tensile bolt                          | 4-M16<br>Material: SCM435<br>Hardness category: at least 10.9                        |
| Tightening torque                          | 240 N·m  |
| Installation surface angle                 | Within $\pm 5^\circ$   |

## 6 Installation Method of Robot Pedestal

Use the bolt holes and fix with high tensile strength bolts during installation of robot pedestal.
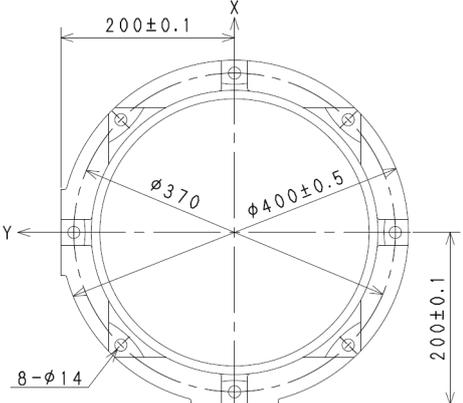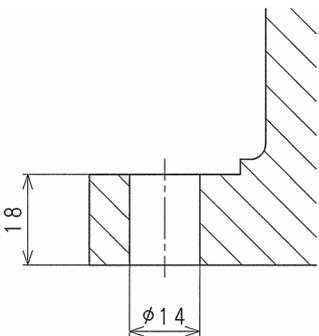
| Model                                      | RS025N, RS025S   |
|--|--|
| Dimensions of the installed part           |    |
| Cross-section figure of the installed part |  |
| Bolt hole                                  | 8-φ14  |
| High tensile bolt                          | 8-M12<br>Material: SCM435<br>Hardness category: at least 10.9                        |
| Tightening torque                          | 98 N·m   |
| Installation surface angle                 | Within ±5°   |

## 7 Installation Method




### WARNING

When installing the robot on the wall or ceiling, the robot may fall or be damaged during the installation operation. Be sure to contact nearest Kawasaki when using this installation method.

### 7.1 Installing the Base Directly on the Floor


In this case, bury steel plate of L2 thickness (See the table below.) in the concrete as shown in the figure below or fix it with anchors. Fix the steel plate firmly enough to endure the reaction forces produced by the robot.

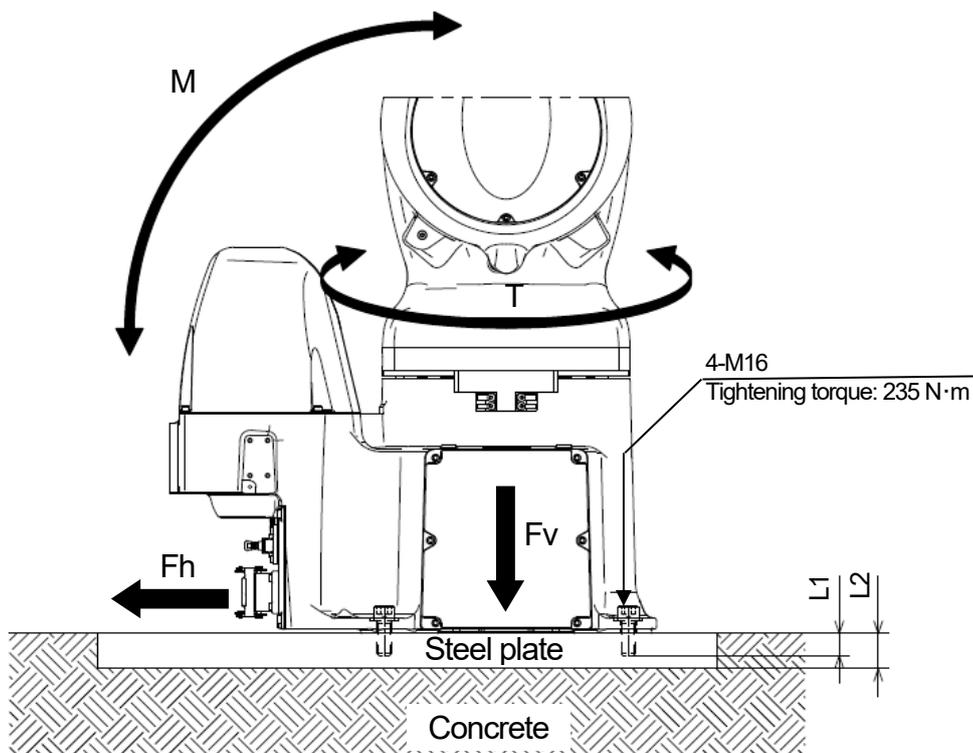

| Model  | RS025N, RS025S |
|--|----------------|
| M (Overturning moment)                                     | 6,900 N·m      |
| T (Rotational torque)                                      | 4,640 N·m      |
| Fv (Vertical direction force)<br>*including its own weight | 10,026 N       |
| Fh (Horizontal direction force)                            | 4,640 N        |
| Base installation bolt                                     | 4-M16          |
| Tightening torque  | 240 N·m        |
| L1   | At least 25 mm |
| L2   | At least 28 mm |

## 7.2 Installing the Robot Pedestal on the Floor

In this case, the installation procedures are practically the same as the procedure shown in the section 7.1.

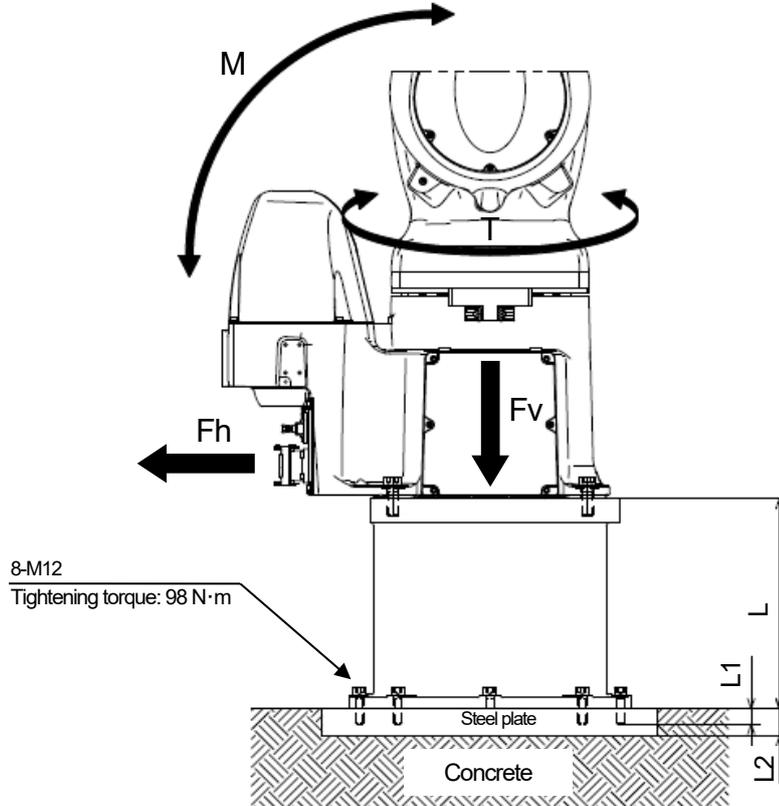


| Model  | RS025N, RS025S     |
|--|--------------------|
| M (Overturning moment)                                     | 6,900 N·m          |
| T (Rotational torque)                                      | 4,640 N·m          |
| Fv (Vertical direction force)<br>*including its own weight | 10,026 N           |
| Fh (Horizontal direction force)                            | 4,640 N            |
| Pedestal mass  | 70 kg (L=600)      |
|  | 45 kg (L=300)      |
| Pedestal installation bolt                                 | 8-M12              |
| Tightening torque  | 98 N·m             |
| L  | 600 (60360-1166*1) |
|  | 300 (60360-1167*1) |
| L1   | At least 18 mm     |
| L2   | At least 20 mm     |

\*1( ) indicates the part number of pedestal.

### 7.3 Installing the Robot Base Plate on the Floor (Without Pedestal)


In this case, install the base plate on concrete floor or steel plate using bolt holes on the base plate.

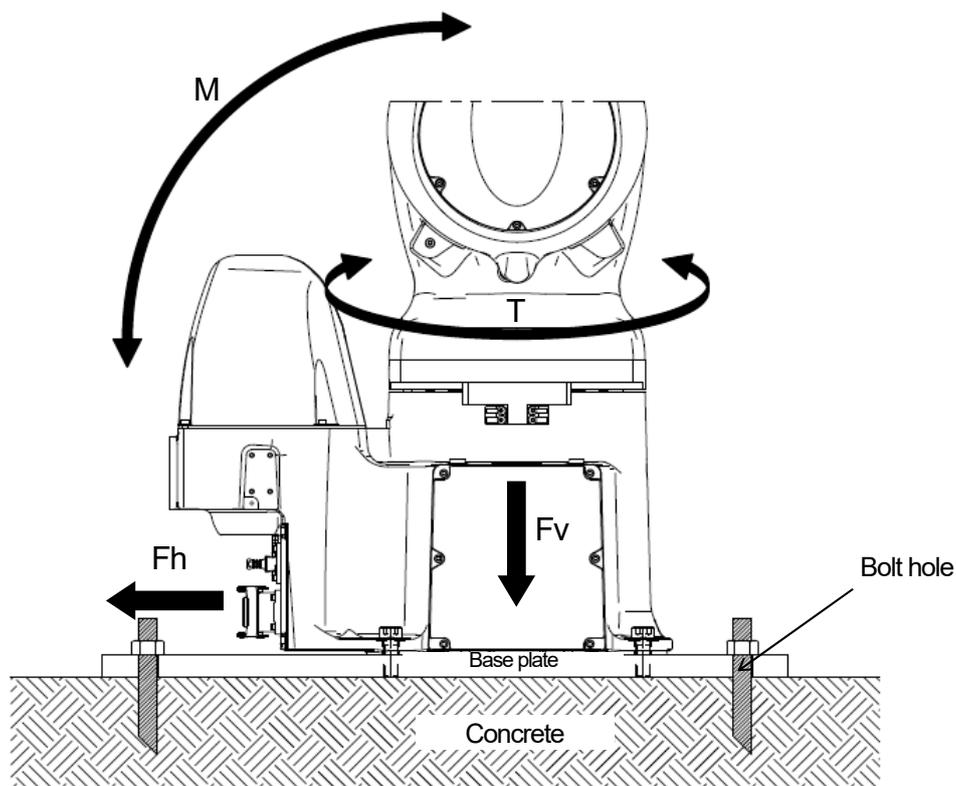

|  |                                 |
|--|---------------------------------|
| Model  | RS025N, RS025S                  |
| M (Overturning moment)                                     | 6,900 N·m                       |
| T (Rotational torque)                                      | 4,640 N·m                       |
| Fv (Vertical direction force)<br>*including its own weight | 10,026 N                        |
| Fh (Horizontal direction force)                            | 4,640 N                         |
| Base plate part number                                     | 60360-1203                      |
| Base plate mass  | 110 kg                          |
| Base plate<br>installation hole                            | 4- $\varnothing$ 20<br>(PCD800) |
| Base plate dimension (mm)                                  | 750 × 750 × 25                  |

### 7.4 Installing the Robot Base Plate on the Floor (With Pedestal)

In this case, install the base plate on concrete floor or steel plate using bolt holes on the base plate.

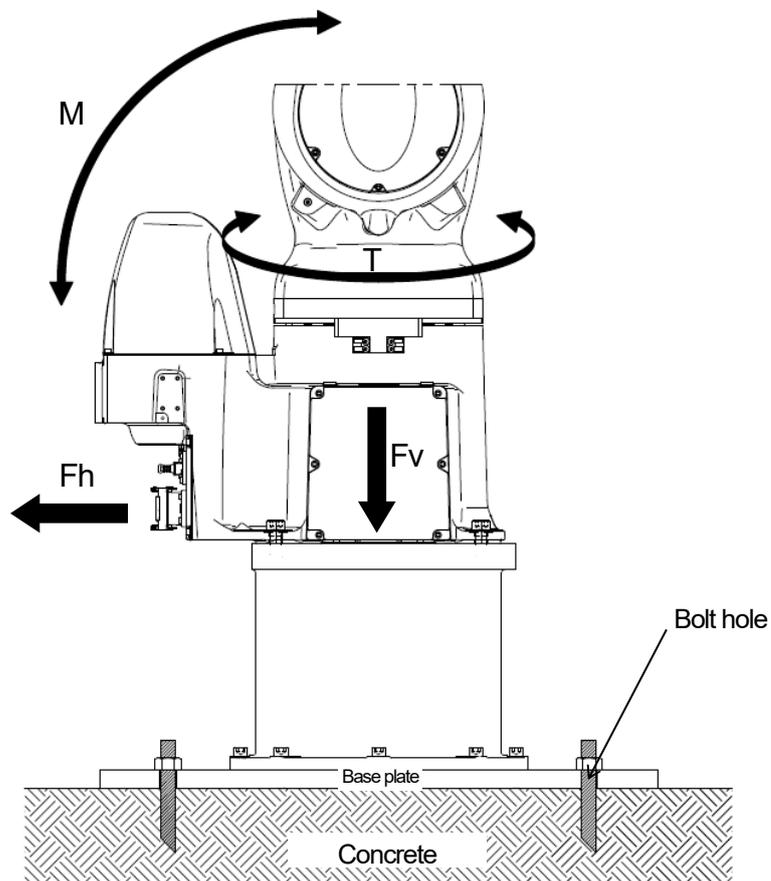


|  |                          |
|--|--------------------------|
| Model  | RS025N, RS025S           |
| M (Overturning moment)                                     | 6,900 N·m                |
| T (Rotational torque)                                      | 4,640 N·m                |
| Fv (Vertical direction force)<br>*including its own weight | 10,026 N                 |
| Fh (Horizontal direction force)                            | 4,640 N                  |
| Part number of pedestal installation base plate            | 60360-1005               |
| Pedestal mass  | 70 kg (L=600)            |
|  | 45 kg (L=300)            |
| Base plate mass  | 110 kg                   |
| Base plate installation hole                               | 4- $\phi$ 20<br>(PCD800) |
| Base plate dimension (mm)                                  | 750 × 750 × 25           |

## 8 Installation of Tools

**⚠ WARNING**


When mounting a hand or other tools, be sure to turn OFF the controller power and external power, and after clearly displaying that "inspection and maintenance is in progress," lock out and tag out the external power so that an operator or third party does not accidentally turn ON the power, causing an unexpected situation such as electric shock.

### 8.1 Wrist Tip (Flange Surface) Dimensions

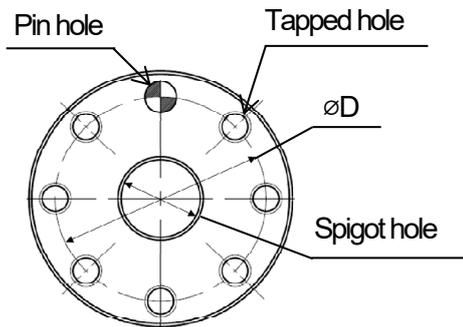

The tip of the robot arm features a flange for mounting tools such as a hand or gun. As shown in the figure on the left, tighten the mounting bolts using the tapped holes machined around the  $\varnothing D$  circumference of the flange. Additionally, use the pin holes and spigot holes for positioning the hand and gun.

### 8.2 Mounting Bolt Specifications

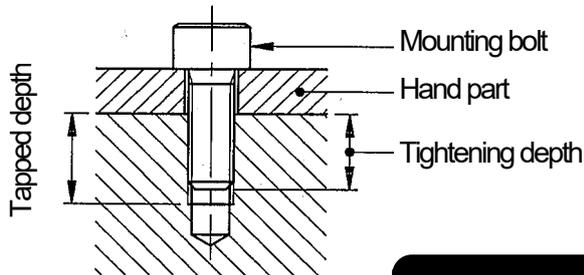

Select bolts with lengths that will reach the designated tightening depth, according to the tapped depths on the tool mounting flange. Additionally, use high tensile bolts, and tighten to the rated torque.

**⚠ CAUTION**

If the tightening depth is above the rated value, then the mounting bolts will bottom out and the tool may not be secured.

|                   |                            |
|-------------------|----------------------------|
| Model             | RS025N, RS025S             |
| Tapped holes      | 7-M6                       |
| $\varnothing D$   | $\varnothing 40$           |
| Pin hole          | $\varnothing 6H7$ Depth 9  |
| Spigot hole       | $\varnothing 15H7$ Depth 5 |
| Tapped depth      | 9 mm                       |
| Tightening depth  | 7 to 8 mm                  |
| High tensile bolt | SCM435, at least 10.9      |
| Tightening torque | 12 N·m                     |

### 8.3 Load Capacity

Load mass applicable to robot is specified for each model and includes the mass of hand and gun, etc. Applicable load torque and moment of inertia around wrist axes (JT4, JT5, and JT6) are also specified. Strictly observe the following restrictions on them.

**⚠ CAUTION**

**Using the robot beyond its specified load may result in degradation of movement performance and shortening of machine service life. The load mass includes the tool mass such as hand, tool changer, shock absorber, etc. If using the robot in excess of its load capacity, first contact Kawasaki without fail.**

The load torque and the moment of inertia can be calculated by the expression below:

Calculation Formula

Load mass :  $M \leq M_{max}$ . (kg)  
(Hand included)

Load torque :  $T = 9.8 \cdot M \cdot L$  (N·m)

Load moment of inertia:  $I = M \cdot L^2 + I_G$  (kg·m<sup>2</sup>)

$M_{max}$ : Maximum load mass: See Section 3.2.

$L$ : Length from axis rotation center to load center of gravity. (Unit: m) (See figure)

$L_6$ : Length from JT6 axis rotation center to load center of gravity.

$L_{4,5}$ : Length from JT4(5) axis rotation center to load center of gravity.



$I_G$ : Moment of inertia around center of gravity. (Unit: kg·m<sup>2</sup>)

If calculation of load is made by dividing the load into construction parts, such as hands and workpieces, use the total calculation values of each part as load torque and moment of inertia.

Regarding the load on the robot wrist section, meet the following restriction conditions:

1. The load mass including hand mass should be less than the following value.  
RS025N, RS025S = 25 kg
2. The load torque and the moment of inertia around each wrist axis (JT4, JT5, and JT6) should be within the following restriction <sup>\*1</sup>, as shown in the graph below.

<sup>\*1</sup> Load moment of inertia exceeding the restriction may be acceptable. In this case, ensure to specify the load. (However, the robot movement may become slow because of optimizing acceleration and deceleration.) See “AS Language Reference Manual” for setting the load. Operating the robot with wrong settings may result in degradation of movement performance and shortening of machine service life.

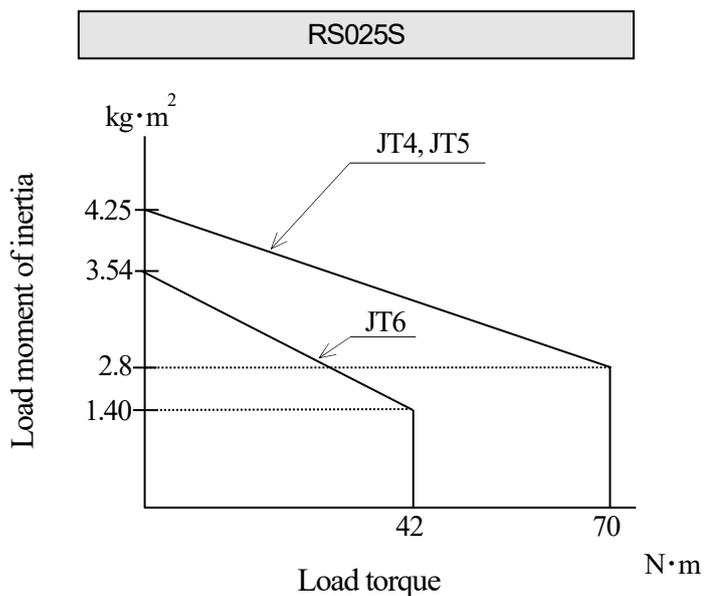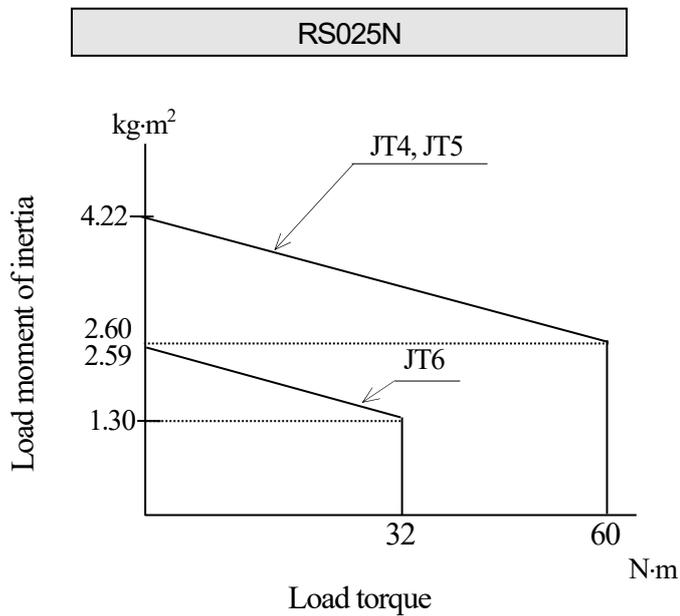

## 9 Mounting External Equipment


### 9.1 Service Tapped Hole Positions

Service tapped holes shown in the figure below are available to mount wiring brackets and external equipment on each part of robot arm.


**⚠ CAUTION**

**Check the robot movement very carefully and confirm that mounted brackets and external equipment do not interfere with peripheral equipment and robot arm itself.**

RS025N

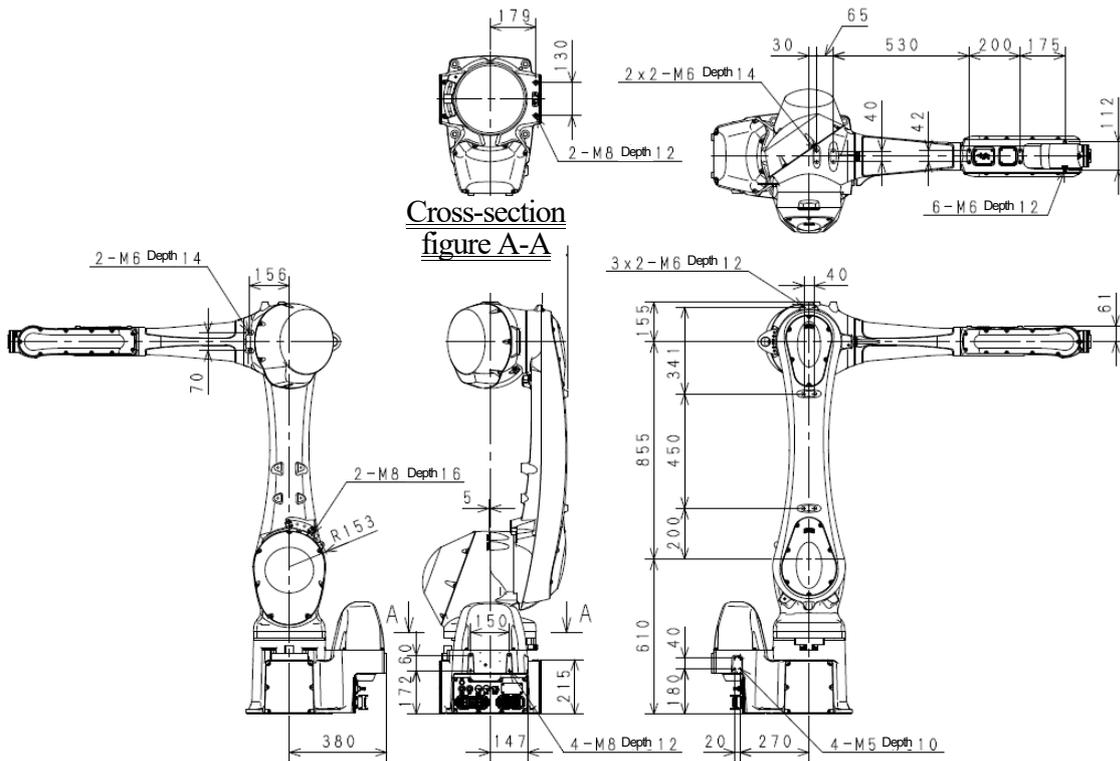

RS025S

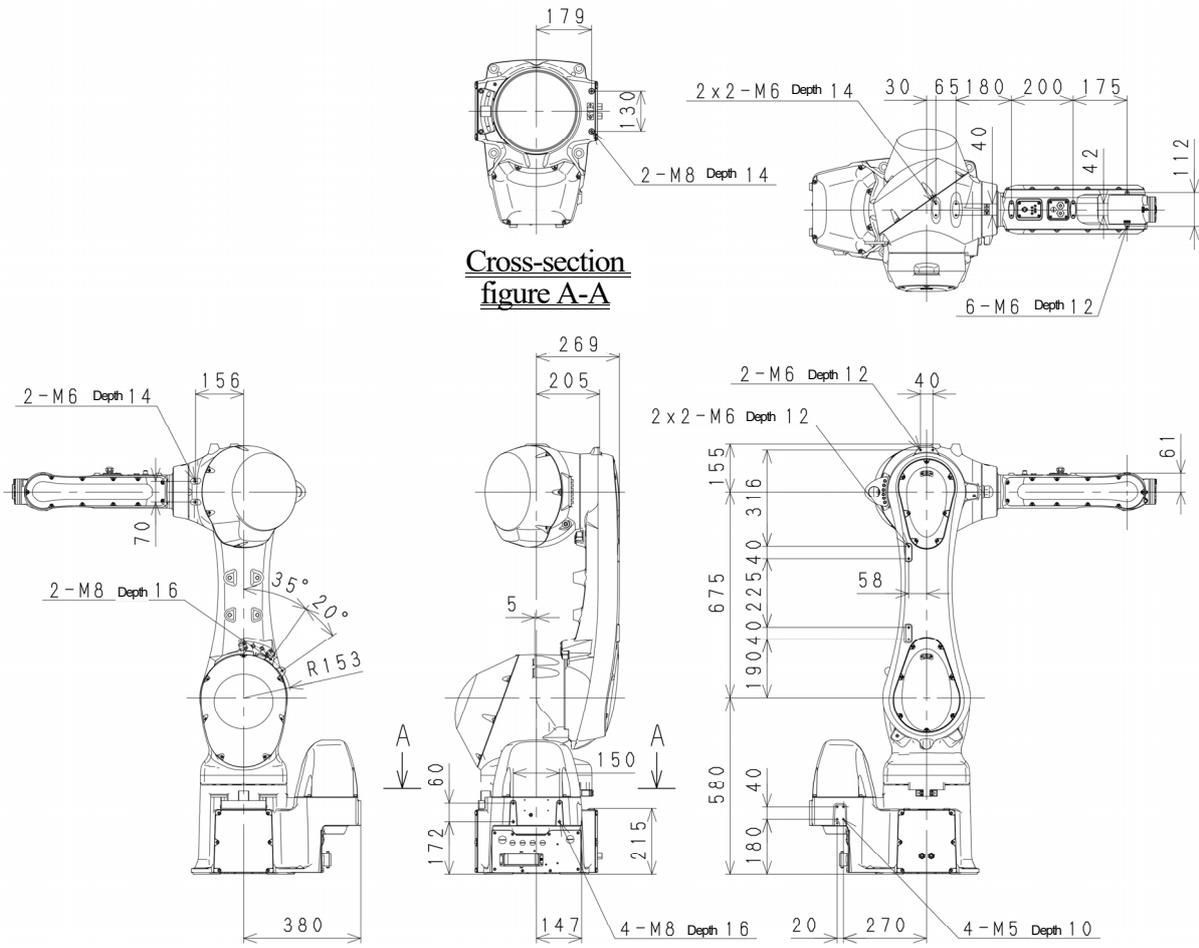

## 9.2 Calculation of Load Caused by External Equipment

The load capacity is set for each arm model. Strictly observe the following restrictions of the load torque and load moment of inertia on arm.




### CAUTION

**If a load at or above the rated value is applied, this can result in deteriorated operational functionality or service life. If an amount other than the rated load will be applied, consult with Kawasaki.**

For JT2 and JT3, limit the total load torque on wrist end and arm not to exceed the maximum allowable load torque. The load torque and the moment of inertia can be calculated by the expression on next page.

Calculation Formula

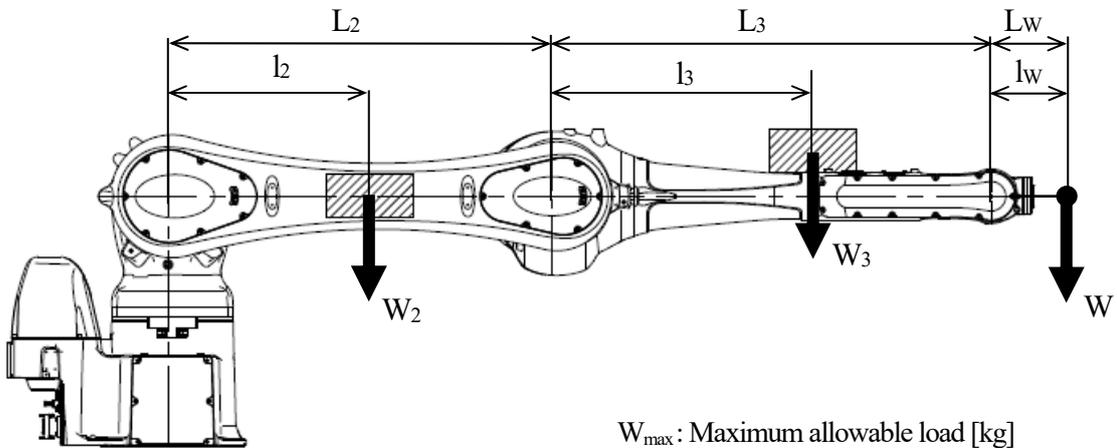

$W_{max}$  : Maximum allowable load [kg]

$W$  : Load on wrist end [kg]

$W_2$  : Total load on lower arm [kg]

$W_3$  : Total load on upper arm [kg]

$l_w$  : Position of the center of the gravity for load on wrist section [mm]

$l_2$  : Position of the center of the gravity for total load on lower arm [mm]

$l_3$  : Position of the center of the gravity for total load on upper arm [mm]

$$\left\{ \begin{array}{l} \bullet \text{ JT3: } W(L_3+l_w)+W_3 \cdot l_3 \leq W_{max}(L_3+L_w) \\ \bullet \text{ JT2: } W(L_2+L_3+l_w)+W_3(L_2+l_3)+W_2 \cdot l_2 \leq W_{max}(L_2+L_3+L_w) \end{array} \right.$$

Use data in the table below for calculation.

|        | $L_1$ [mm] | $L_2$ [mm] | $L_3$ [mm] | $L_w$ [mm] | $W_{max}$ [kg] |
|--------|------------|------------|------------|------------|----------------|
| RS025N | 0          | 885        | 1,000      | 100        | 25             |
| RS025S | 0          | 675        | 650        | 130        | 25             |


However, do not exceed values below for  $W_3$ .

$$W_3 < \frac{W_{max}(L_1 + L_2 + L_3 + L_w)}{L_1 + L_2}$$

## 10 Connection of Air System

### 10.1 Air Piping

RS025N and RS025S robot houses air piping and valves for driving the tool on the robot arm. The valves can be turned ON/OFF by the Teach Pendant without using an interlock panel.

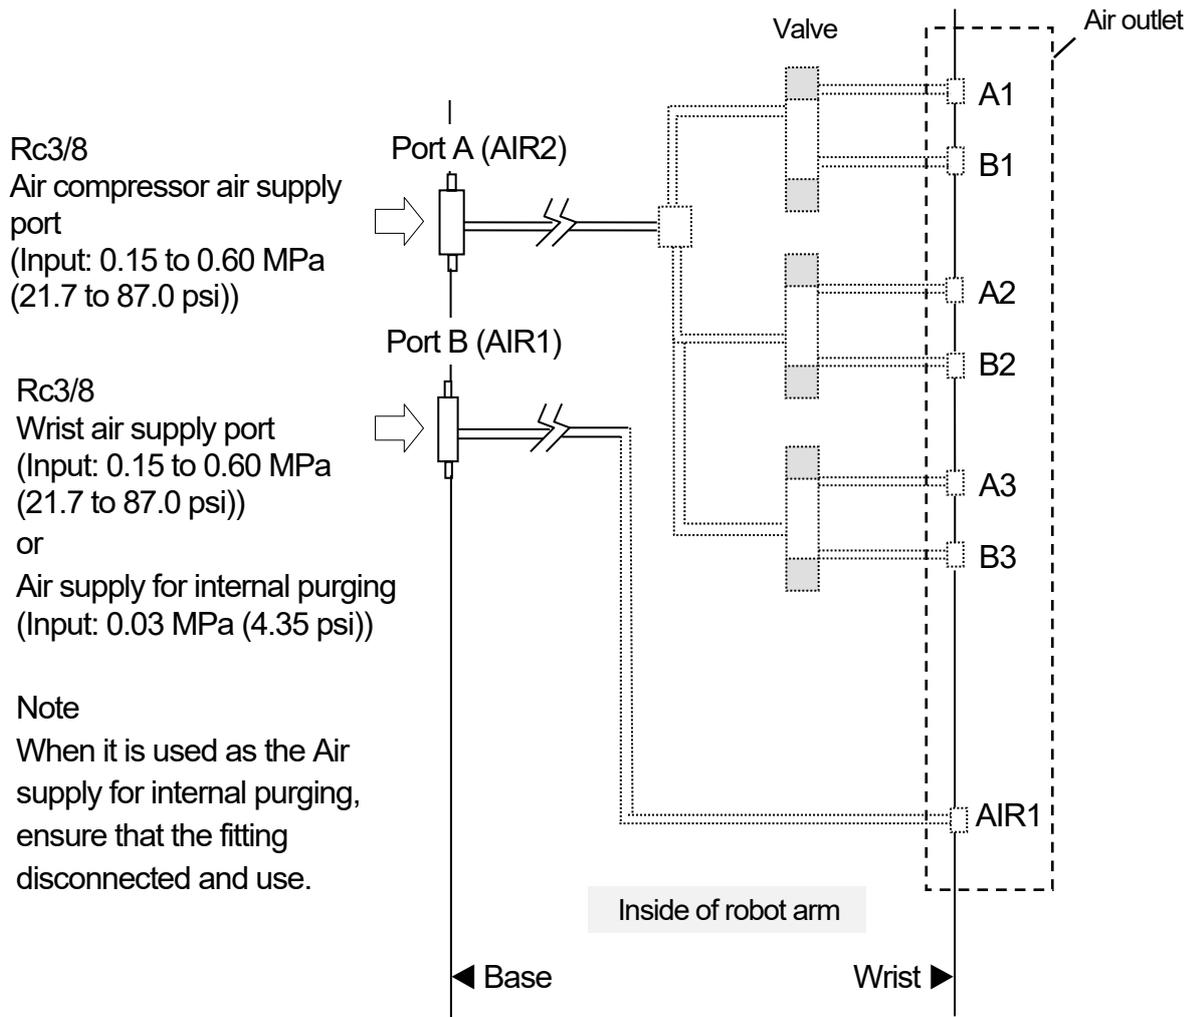

Note Optional equipment is shown by the dotted line (.....).

The built-in valves are specified as follows:


|          |  |
|----------|--|
| Standard | No built-in valve  |
| Option   | Double solenoid/Single solenoid valves      3 units max. |

Note For the valve specification of RS025N and RS025S, CV value is 0.2 and the number of switching positions is 2.

**[NOTE]**

Valves that do not meet the specifications on the previous page cannot be mounted in the arm. Please contact Kawasaki for information on air system specifications if such valves are used.

## 10.2 Air Supply to the Robot Arm

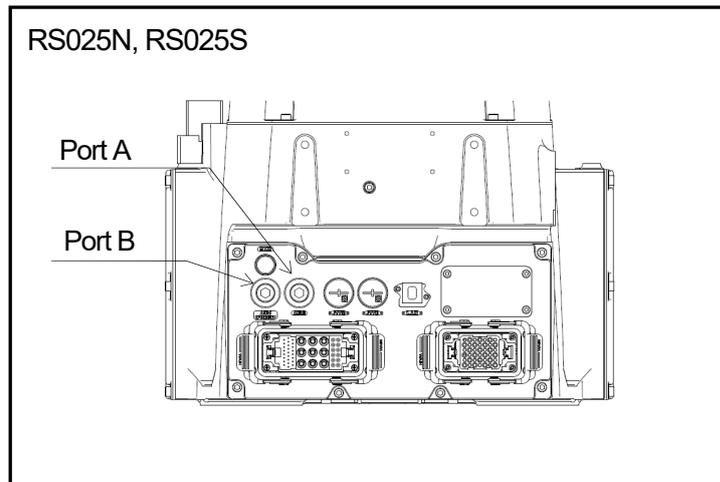

As shown above, the air connection ports are provided in the base section of robot arm.



### CAUTION

**Supply clean dry air with input pressure of 0.15 to 0.6 MPa (21.7 to 87.0 psi) to the Port A (Rc3/8).**

For the air purge specification, disconnect the air piping connected to the wrist and carry out appropriately in place and use. Port B is provided with air inlet (Rc3/8) in the same way as Port A.



### CAUTION


**For air purge specification, supply clean dry air with input pressure of 0.03 MPa (4.35 psi).**

Tighten the couplers connected to the ports with 6.9 N·m or below.




### CAUTION

**When connecting the couplers, the frame may be damaged if the couplers are tightened with a large torque.**

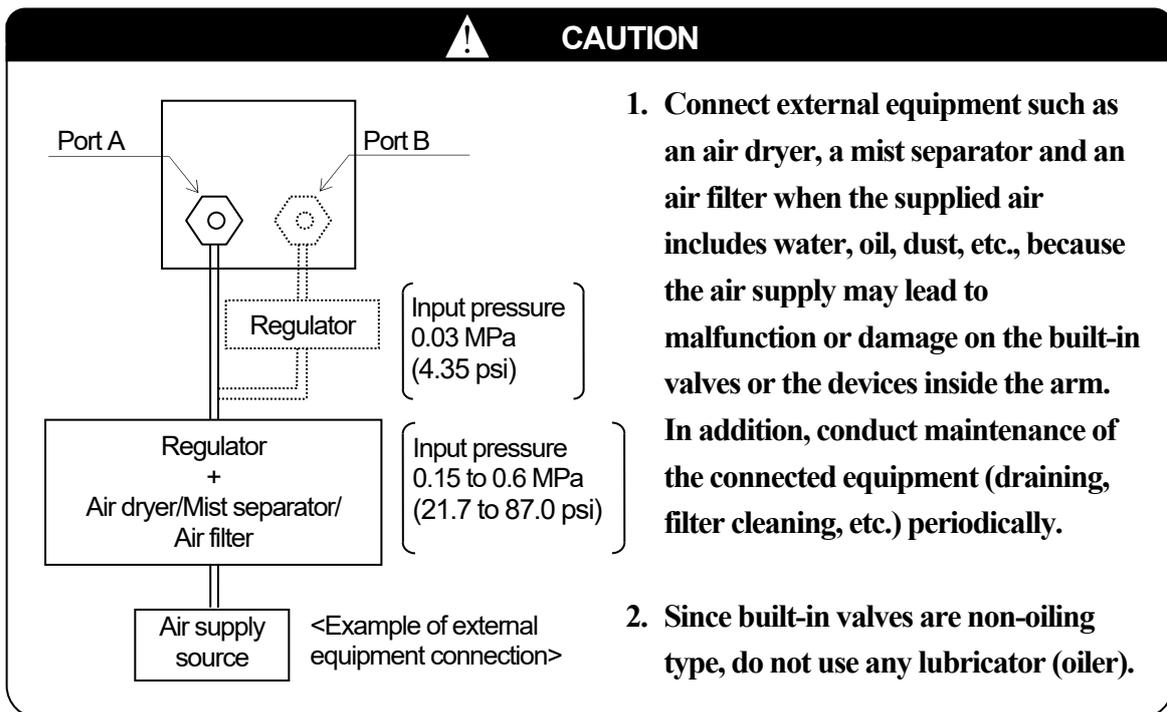

### 10.3 Tubing from Air Outlet to Hand

As shown in the figure below, air outlet ports are provided (optional). The outlet ports are Port M5.

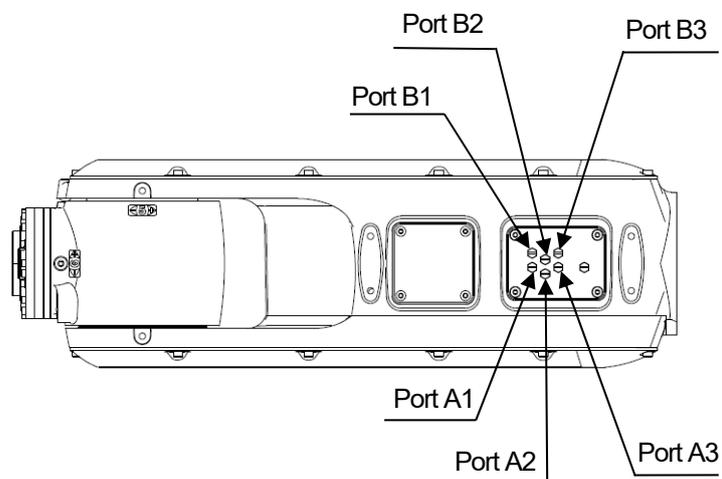

#### CAUTION

**When tubing, ensure that the air outlet ports are not turned.  
If the outlet ports turn, the internal tube may bend or break causing air supply stop at worst.**

## Appendix 1 Stopping Performance of Robot

This robot is controlled by the stopping method prescribed in the standard IEC 60204-1. In this section, the stopping distance or angle and the stopping time by categories are shown.

The stopping distance or angle and the stopping time are based on Annex B of ISO 10218-1 standard.

Stopping distance (angle): The distance or angle until the robot comes to a complete stop after the stop command is given

Stopping time: The time until the robot comes to a complete stop after the stop command is given

Calculate the stopping distance from the stopping angle of each axis considering stopping category, load, speed, extension and workpiece size shown in this section, and perform appropriate risk assessments. The values shown in this section may be different from the actual stopping distance or angle and the stopping time depending on the influence inside and outside the robot and the motion and posture at stop, so check the values before use.

### 1. Definition of terms

Load: Loading mass on flange section

Speed: Speed of robot

Extension: Distance from JT1 center of rotation to TCP (tool center point)

### 2. JT1/JT2/JT3 stopping angle and stopping time in category 0

[Measurement conditions]

Load: Maximum load

Speed: Maximum speed

Extension: Maximum extension

#### RS025N

| Axis | Stopping angle [deg] | Stopping time [sec] |
|------|----------------------|---------------------|
| JT1  | 27.0                 | 0.7                 |
| JT2  | 21.8                 | 0.6                 |
| JT3  | 10.0                 | 0.7                 |


#### RS025S

| Axis | Stopping angle [deg] | Stopping time [sec] |
|------|----------------------|---------------------|
| JT1  | 29.2                 | 0.4                 |
| JT2  | 25.7                 | 1.0                 |
| JT3  | 26.2                 | 1.0                 |

## 3. JT1/JT2/JT3 stopping angle and stopping time in category 1

The stopping angle and the stopping time are values for each combination when load, speed, and extension are at 33%, 66%, and 100%, respectively.







- Extension diagram

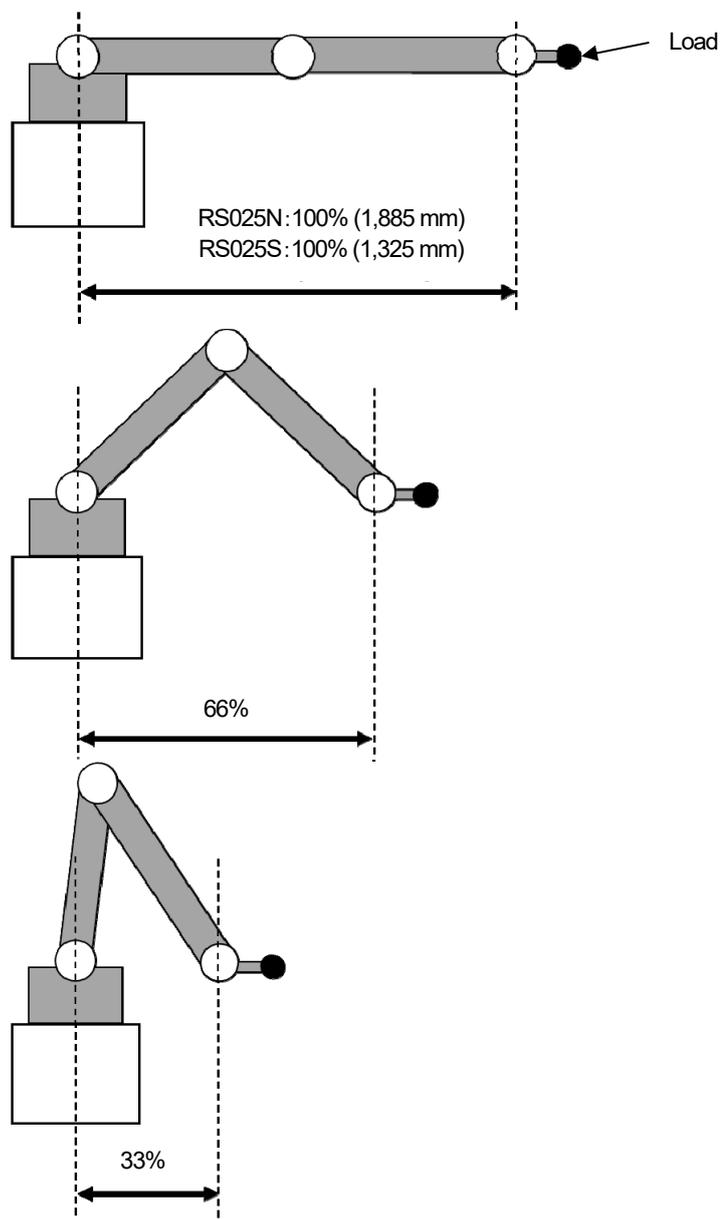







■ Stopping angle and stopping time

RS025N



- Stopping angle and stopping time in category 1: JT1

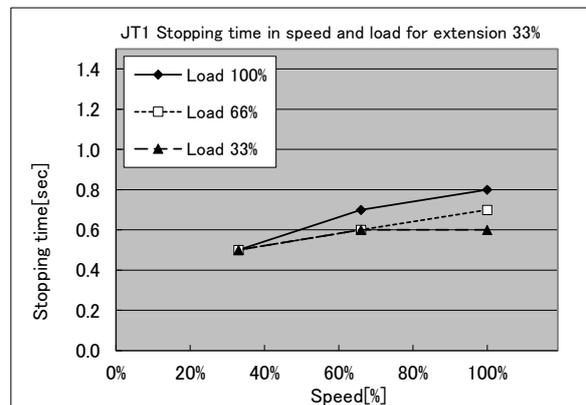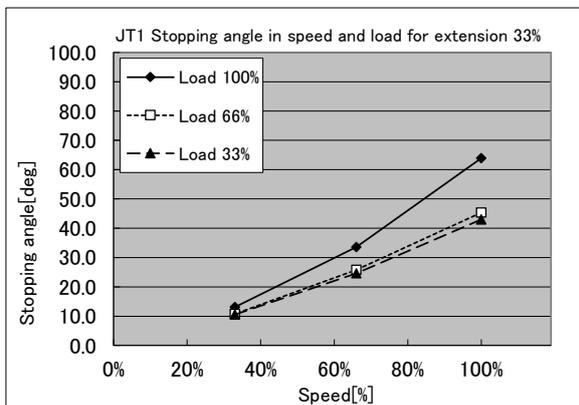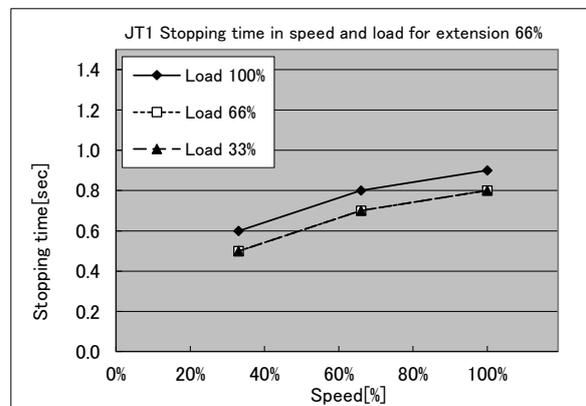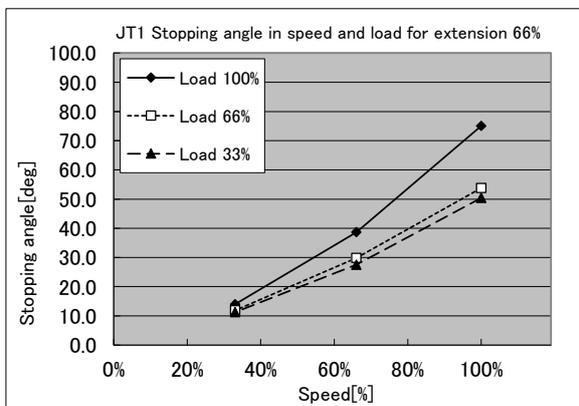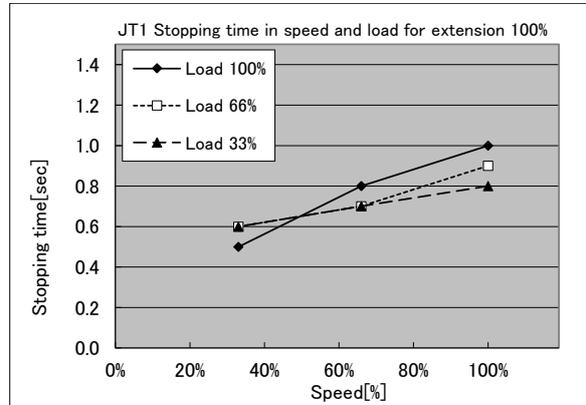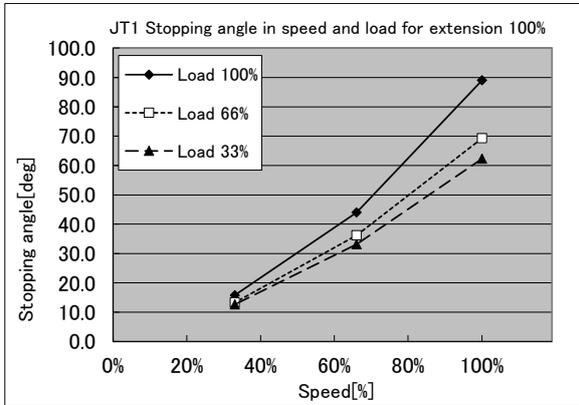

• Stopping angle and stopping time in category 1: JT2

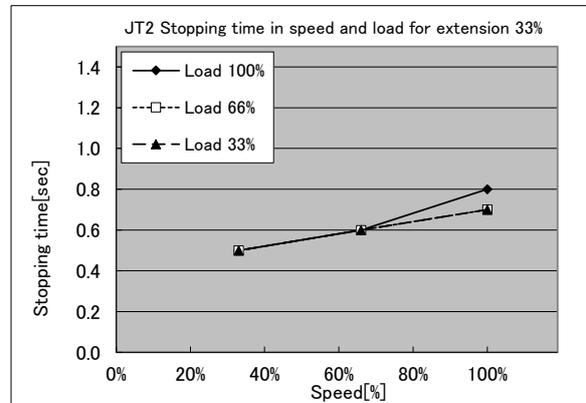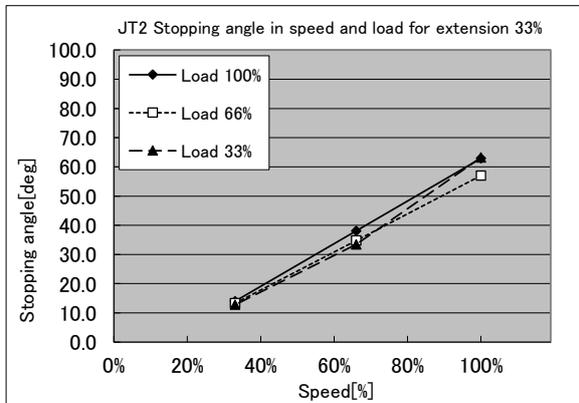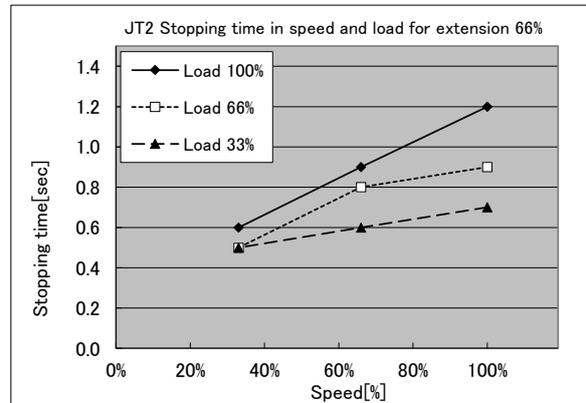
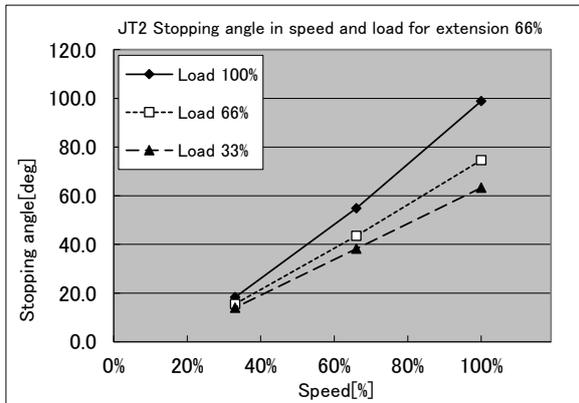
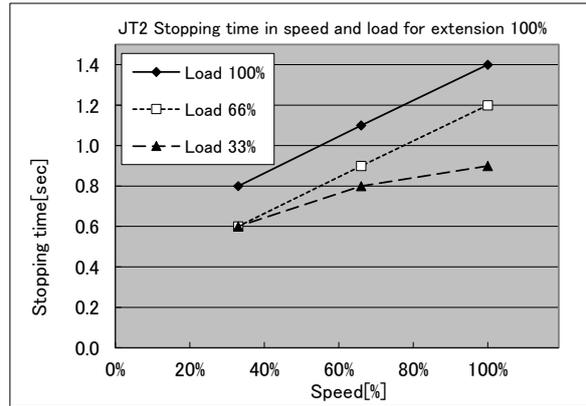
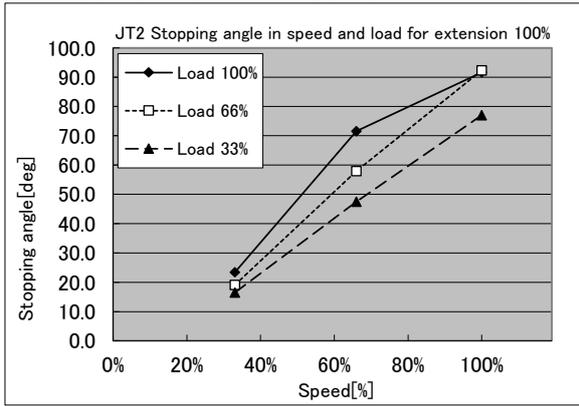




- Stopping angle and stopping time in category 1: JT3 (posture 100% only)

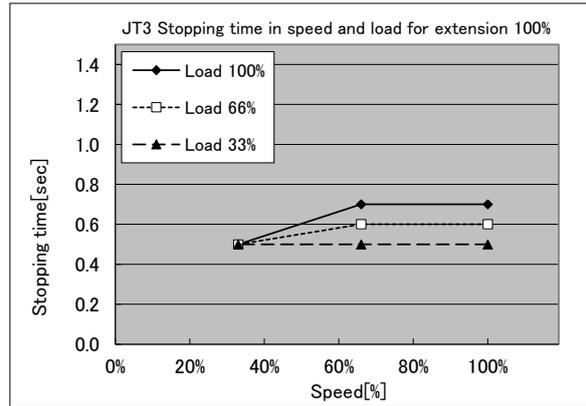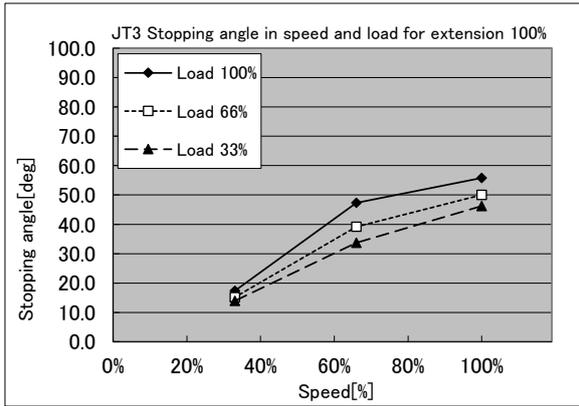







RS025S

- Stopping angle and stopping time in category 1: JT1

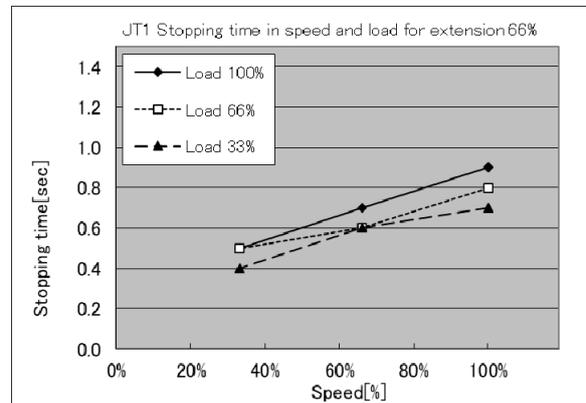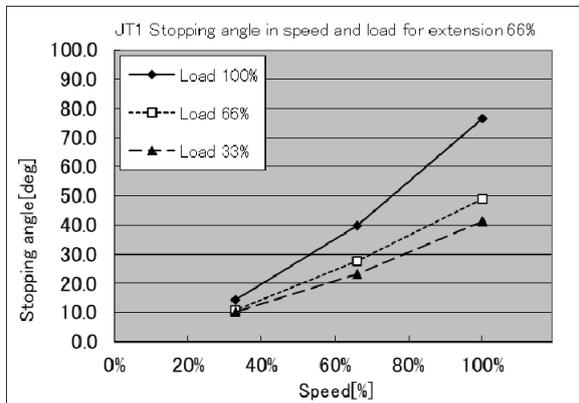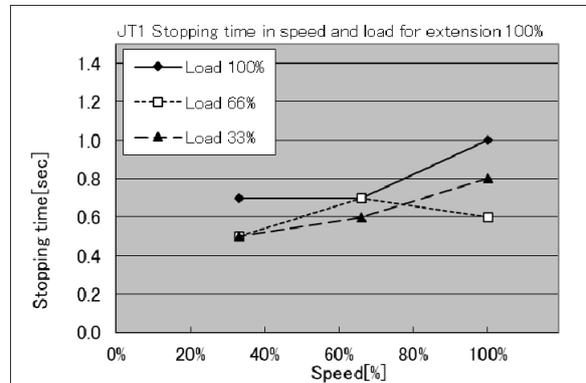
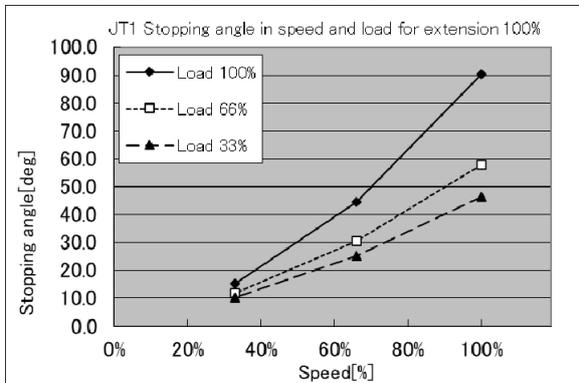


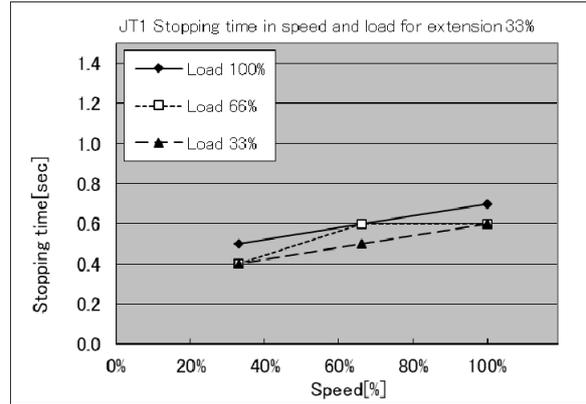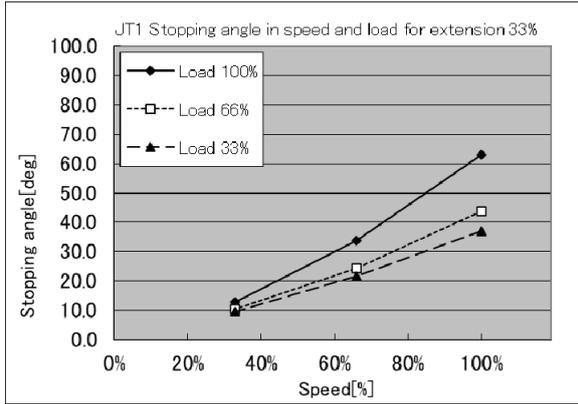

• Stopping angle and stopping time in category 1: JT2

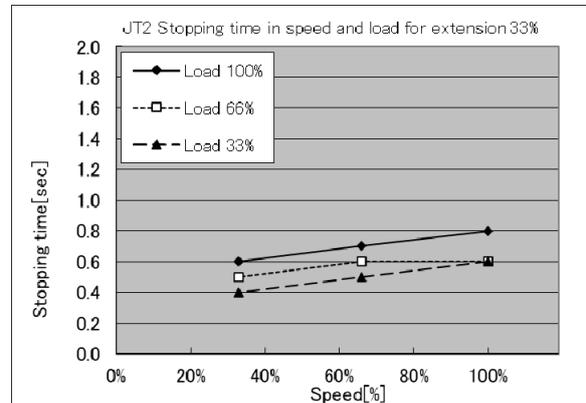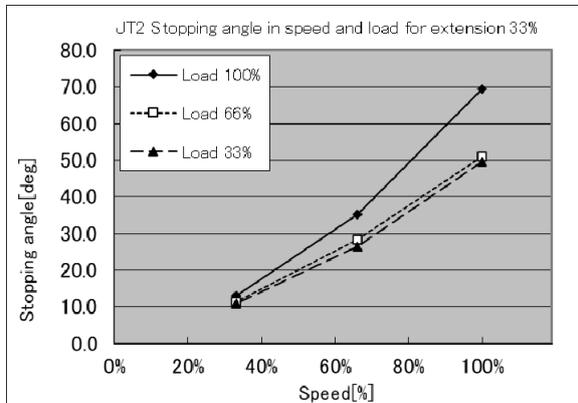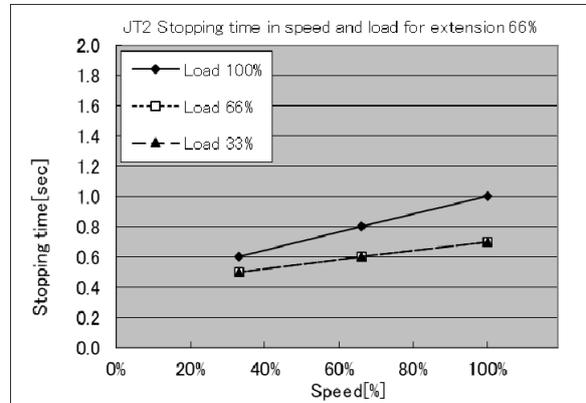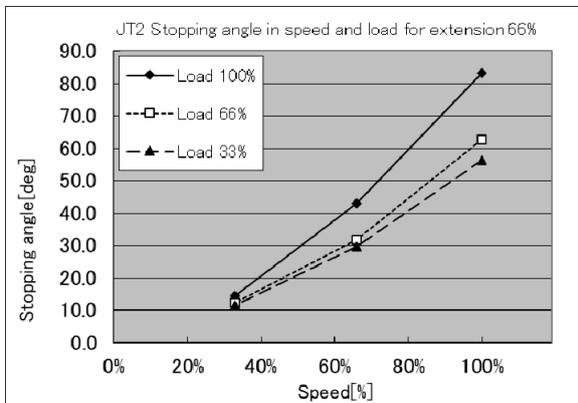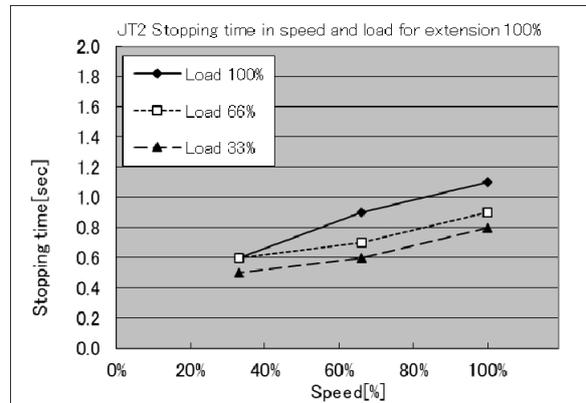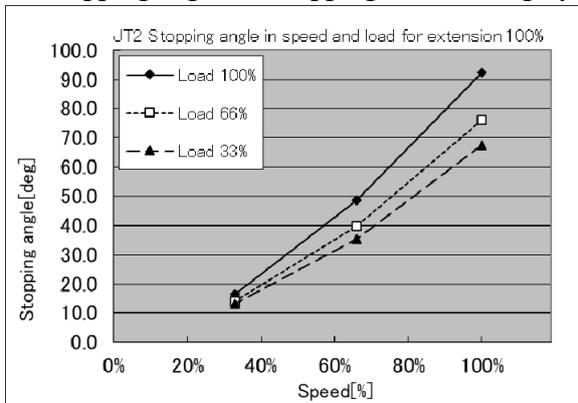

- Stopping angle and stopping time in category 1: JT3 (posture 100% only)

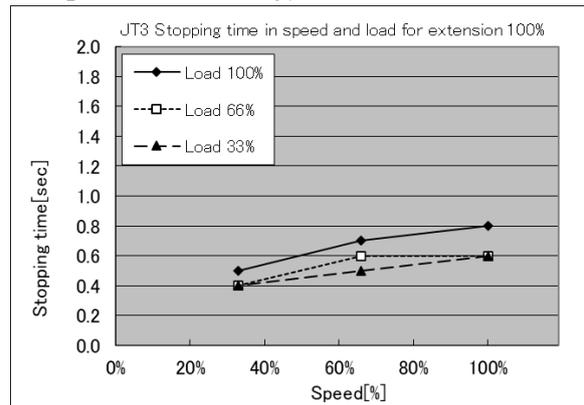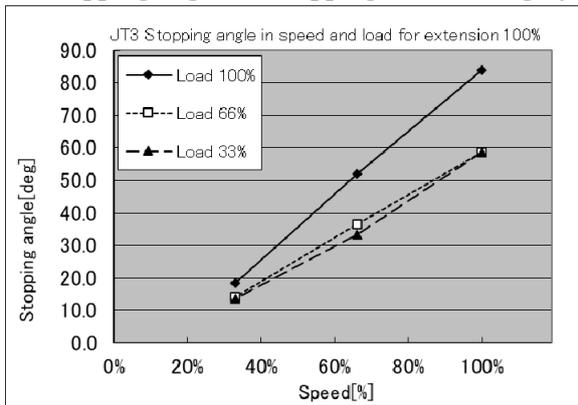



---

**Kawasaki Robot**      RS025  
Installation and Connection Manual

---

2022-02 : 1st Edition

2025-12 : 4th Edition

Publication : Kawasaki Heavy Industries, Ltd.

90202-1258DED

---

Copyright © 2022 Kawasaki Heavy Industries, Ltd. All rights reserved.