Kawasaki Robotics (USA), Inc.

Corporate Headquarters for Americas

28140 Lakeview Drive, Wixom, MI 48393, U.S.A. Phone: +1-248-446-4100 Fax: +1-248-446-4200

Global Network

Kawasaki Heavy Industries, Ltd.

Tokyo Head Office/Robot Division 1-14-5, Kaigan, Minato-ku, Tokyo 105-8315, Japan Phone: +81-3-3435-6852 Fax: +81-3-3437-9880

Kawasaki Heavy Industries, Ltd.

Akashi Works/Robot Division

1-1, Kawasaki-cho, Akashi, Hyogo 673-8666, Japan Phone: +81-78-921-2946 Fax: +81-78-923-6548

Kawasaki Robotics (UK), Ltd.

Unit 4 Easter Court, Europa Boulevard, Westbrook Warrington Cheshire, WA5 7ZB, United Kingdom

Phone: +44-1925-71-3000 Fax: +44-1925-71-3001

Kawasaki Robotics GmbH

Im Taubental 32, 41468 Neuss, Germany Phone: +49-2131-3426-0 Fax: +49-2131-3426-22

Kawasaki Robotics Korea, Ltd.

43, Namdong-daero 215beon-gil, Namdong-gu Incheon, 21633. Korea

Phone: +82-32-821-6941 Fax: +82-32-821-6947

1 Holle. 102 32 021 03 11 1 1 4x. 102 32 01

Kawasaki Robotics (Tianjin) Co., Ltd.

Bldg 3, No.16, Xiang'an Road, TEDA, Tianjin 300457, China Phone: +86-22-5983-1888 Fax: +86-22-5983-1889

Kawasaki Motors Enterprise (Thailand) Co., Ltd.

Rayong Robot Cente

119/10 Moo 4 T. Pluak Daeng, A. Pluak Daeng, Rayong 21140, Thailand Phone: +66-38-955-040-58 Fax: +66-38-955-145

KawasakiRobotics.com

Kawasaki Robot



CAUTIONS TO BE TAKEN TO ENSURE SAFETY


- For those persons involved with the operation / service of your system, including Kawasaki Robot, they must strictly observe all safety regulations at all times. They should carefully read the Manuals and other related safety documents.
- Products described in this catalogue are general industrial robots. Therefore, if a customer wishes to use the Robot for special purposes, which might endanger operators or if the Robot has any problems, please contact us. We will be pleased to help you.
- Be careful as Photographs illustrated in this catalogue are frequently taken after removing safety fences and other safety devices stipulated in the safety regulations from the Robot operation system.





ISO certified in Wixom, Michigan U.S.A.

Kawasaki Robot Palletizing robots

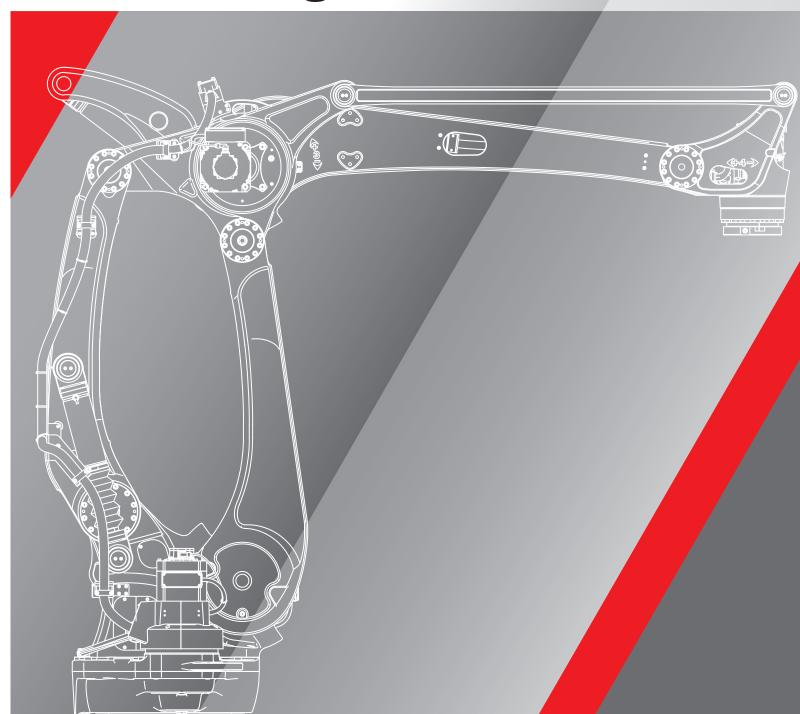

Kawasaki's high-speed palletizing robots meet the demands for flexibility and speed.

In today's highly competitive marketplace, meeting the demand for just-in-time deliveries, flexible packaging, the freshest products, or the highest production line efficiencies can be crucial to a company's success. Efforts to meet these demands have led to the development of automation systems for the end-of-line and distribution processes of palletizing and depalletizing. Kawasaki's robotic palletizing solutions provide the pallet pattern flexibility, tooling flexibility, and cycle times needed to deal with multi-variety and small-batch production, and reduce process change costs.


Kawasaki Robotics offers two lines of palletizing robots with a wide range of payload options to suit most needs, including the RD080N robot with a maximum payload of 80 kg, and CP180L/300L/500L/700L robots with maximum payloads of 180/300/500/700 kg. Each has industry leading reach, speed and quality to deliver high-performance automation technology for most any palletizing application.

Kawasaki can provide a solution to give your production line the palletizing flexibility and product rate it needs to compete in today's economy.

Standard specifications

		RD080N	CP180L	CP300L	CP500L	CP700L		
Туре			Articulated					
Degrees of freedom (axes)		5	4					
Max. payload (kg)		80	180	300	500	700		
Max. reach (mm)		2,100	3,255					
	Arm rotation (J	±180	±160					
Motion range (°)	Arm out-in (J	-2) +140105	+9546					
	Arm up-down (J	T3) +40205	+15110					
	Wrist swivel (J	±360	±360					
	Wrist compensation (J	T5) ±10 *4	-					
	Arm rotation (J	180	140 *5	115 * ⁶	85	75		
Max.	Arm out-in (J	T2) 180	125 * ⁵	100 * ⁶	80	65		
speed (°/s)	Arm up-down (J	T3) 175	130 * ⁵	100 * ⁶	80	65		
	Wrist swivel (J	74) 360	400 *5	250 * ⁶	180	170		
Working	Width	1,100	1,800					
area	Depth	1,100	1,600					
(mm)	Height	2,062.3		2,2	200			
Moment of ir	nertia (kg•m²)	13.7	50 * ⁵	100 * ⁶	250	500		
Palletizing ca	pacity (cycle/hour) *1	900	2,050 *5	1,700 *6	1,000	900		
Positional repeatability (mm) *2		±0.07	±0.5					
Mass (kg)		540	1,600 1,650			550		
Power requirements (kVA) *3		4.5	12					
Controllor	America & Europe		E03					
Controller	Japan & Asia							

*1: Motion pattern (400 mm up, 2,000 mm horizontal, 400 mm down in a to-and-fro motion) *2: Conforms to ISO9283 *3: Depends on the payload and motion patterns *4: Operating angle of the JT5 is ±10 degrees perpendicular to the ground *5: In case of 130 kg payload and less *6: In case of 250 kg payload and less

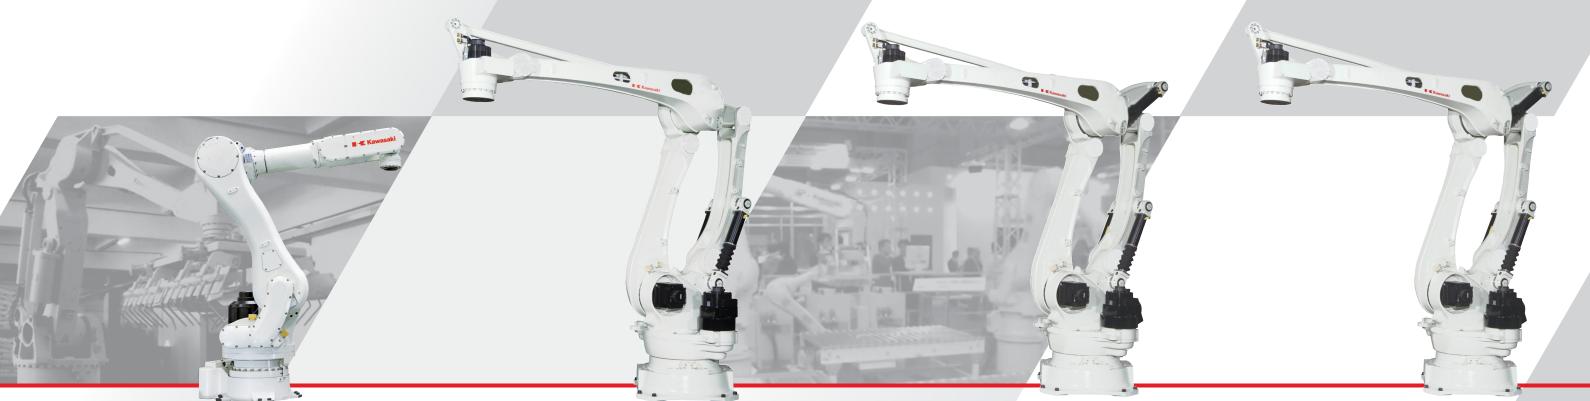

RD080N CP180L / 300L CP500L CP700L

Palletizing capacity worthy of our high-speed age

Kawasaki palletizing robots deliver the high-speed operation needed for distribution. Based on a robot stroke of 400 mm upward-downward and 2,000 mm in the left-right direction, the RD080N can perform 900 cycles per hour with loads of 80 kg, and the CP180L achieves an industry leading 2,050 cycles per hour with loads of 130 kg.

Compact applications

The Kawasaki RD080N is designed specifically for applications where a compact, high-speed, palletizing robot is required. Despite its slim, space saving design, the RD080N can manipulate loads up to 80 kg and create pallet stacks over 2 meters tall.

Large work envelope and high payload capacity

At 3.075 mm and 3,256 mm respectively, the high vertical reach capability of the CP series robots is ideal for tall pallet stacks and multi-lane applications. The extra-long horizontal reach of 3,255 mm for both series allows for one robot to be used to cover up to four pallets. The high payload capacity CP series robots can handle up to 700 kg. This allows for multiple product picks and complete pallet layer handling, resulting in fewer cycles per completed pallet.

Easy-to-use palletizing software K-SPARC

Available as an option, Kawasaki's K-SPARC palletizing software enables users to quickly and easily simulate layout planning and operations, as well as create robot operation programs on a computer.


Space and energy saving

The CP series E03 controller is only 25% of the standard palletizing * controller size (41% with transformer unit) and fits under conveyors and other equipment. The EO3 controller generates electric power while in a deceleration mode, reducing energy consumption and minimizing CO₂ emissions.


* In case of E4X

Electricity regeneration function

Conventional controller

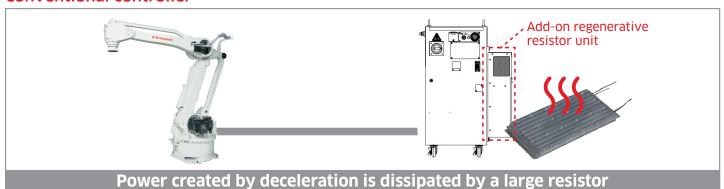


E03 controller

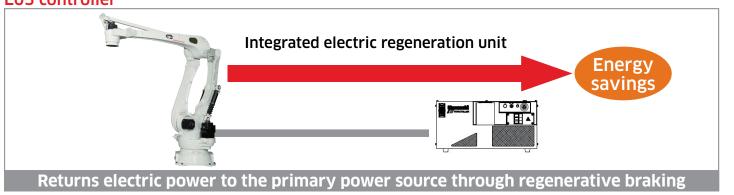


Palletizing cells

Kawasaki provides system configurations perfectly adapted to your needs.

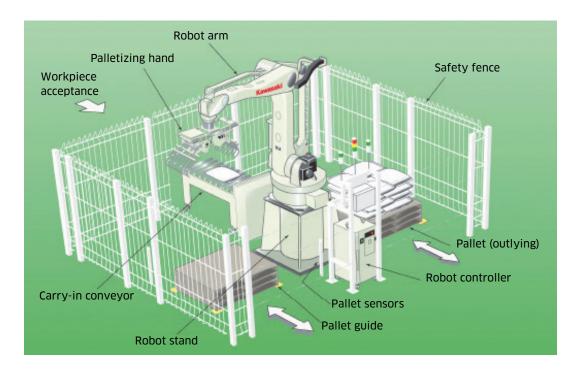

Sample layout for palletizing cells

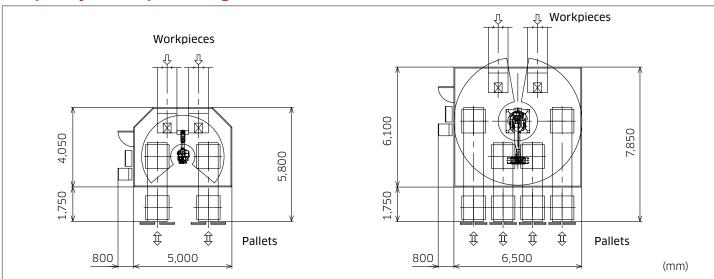

Sample of palletizing cells

Different

workpieces sent


from the same conveyor are

separated and palletized.



Different workpieces sent from multiple conveyors are separated and palletized

System configuration example

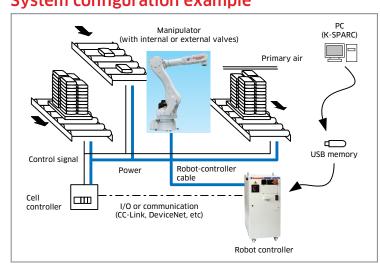


3

3D Vision system (option)

Vision guided depalletizing cells

- Robot detects the 3D position and posture of stacked bags.
- A single fixed camera can monitor wide stacking areas.
- Adjust to changes in peripheral lighting environments and workpiece surface conditions.
- No need for configuring the individual settings or the stacking patterns of each workpiece.
- Robot handles different types of workpieces at the same time.

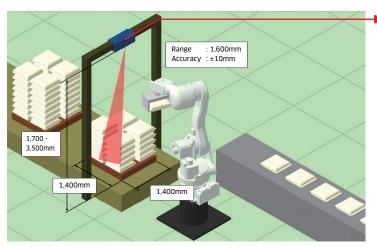


LSC (Laser Slit-scan Camera)



Item	Specification			
Measuring range (mm)	L1,400 × W1,400 × L1,800			
Objective distance (mm)	1,700			
Laser class	Class 3R			
Dimension (mm)	L1,100 × W125 × H125			
Mass (kg)	about 6.5			


System configuration example

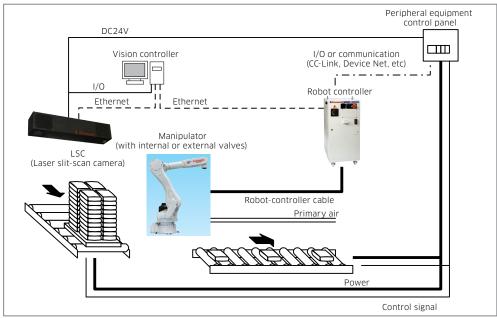

Other depalletizing cells * For these applications, the workpiece sizes and stacking patterns must be configured.



Depalletizing carton boxes

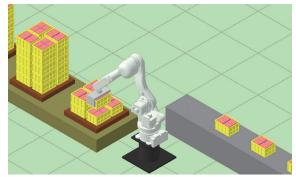

Depalletizing plastic containers

Kawasaki Robot Solutions


Depalletizing of cardboard and paper bags

Features

- Registration of the target workpiece is not necessary.
- Automatic recognition is possible with only dimensional information of the workpiece from outside.

Item	Specifications		
Measuring range	1,100mm×1,100mm		
Distance to object	1,900mm - 3,700mm (distance from top of workpiece)		
Processing speed	Less than 1 second (processing time fluctuates depending on the object)		
Resolution of Z	±3.5 to ±12mm (varies with distance to the object)		
Resolution of XY	±1.2mm to ±2.5mm (varies with distance to the object)		

- Initial adjustment work is drastically reduced thanks to suitable robot application packages.
- High-speed recognition is possible using dedicated vision equipment.

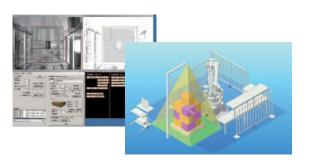

Easy-to-use palletizing software (option)



Supervise Safety Smart






- You can build an advanced and flexible robot safety system according to the motion condition by monitoring the movements of the robot.
- Save Space by limiting the range of robot movements
- Safety function can be switched according to the state of safety signal input
- IEC61508 (SIL2) and ISO13849-1 (PLd/category 3) certification

Save space


You can reduce the size of the safety fence area by limiting the range of robot movements to the minimum.

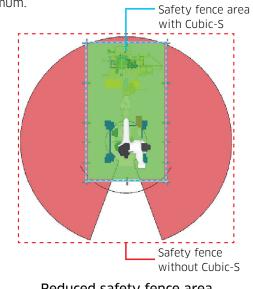

Reduced safety fence area


Transporting workpieces during robot motion


You can limit the range of robot movements according to the human work area.

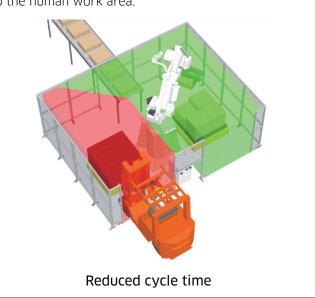



Item	Specification			
Safety performance	IEC61508 (SIL2) ISO13849-1 (PLd/category3)			
Monitoring the number of joints	Maximum 9 joints			
Safety function	Motion area monitoring, Joint monitoring, Speed monitoring, Stand still monitoring, Tool orientation monitoring, Protective stop, Emergency stop, Safety status output			
Safety input and output	Dual channel safety input 8CH Dual channel safety output 8CH] It is possible to allocate Safety Status Output Signals and Safety Input Signals of each Safety functions			

Motion range & dimensions

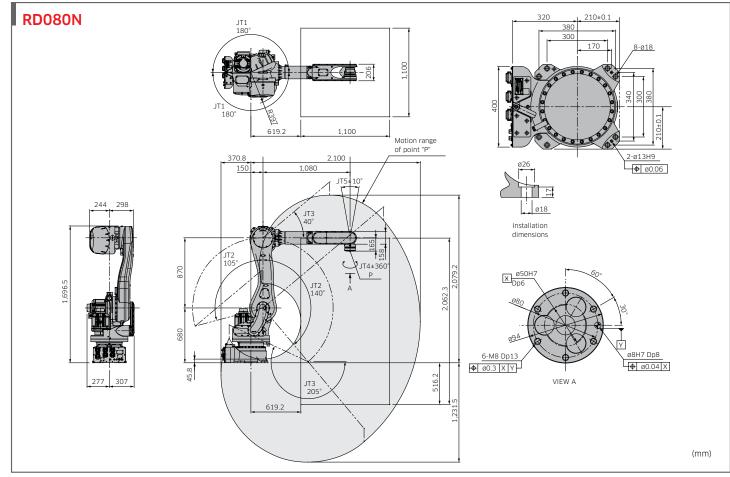

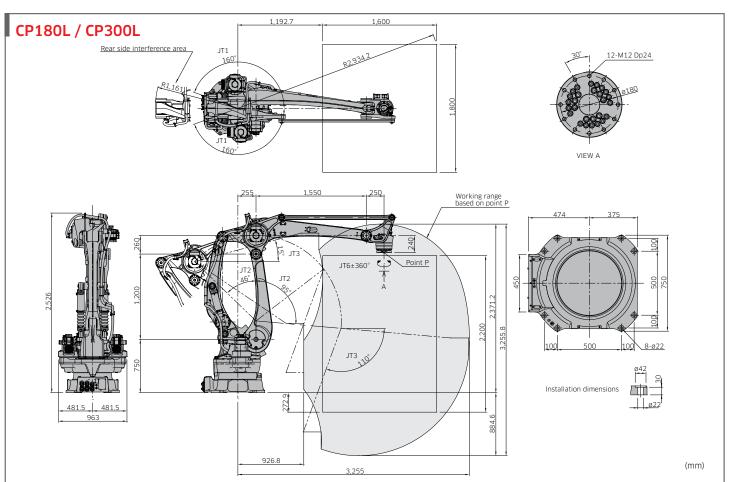

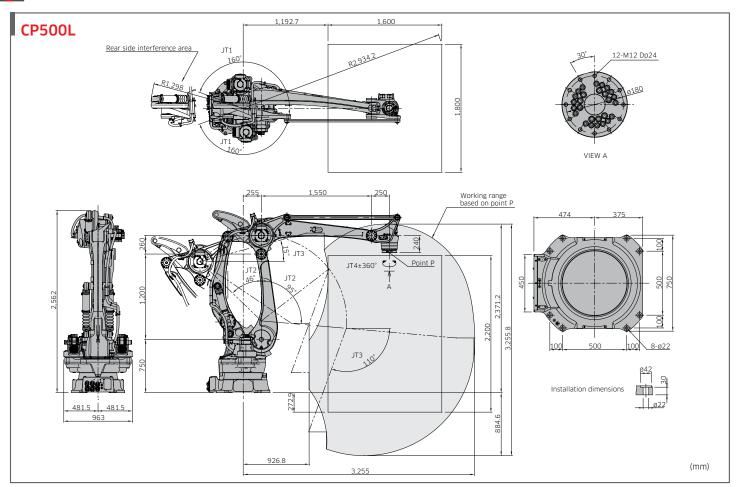

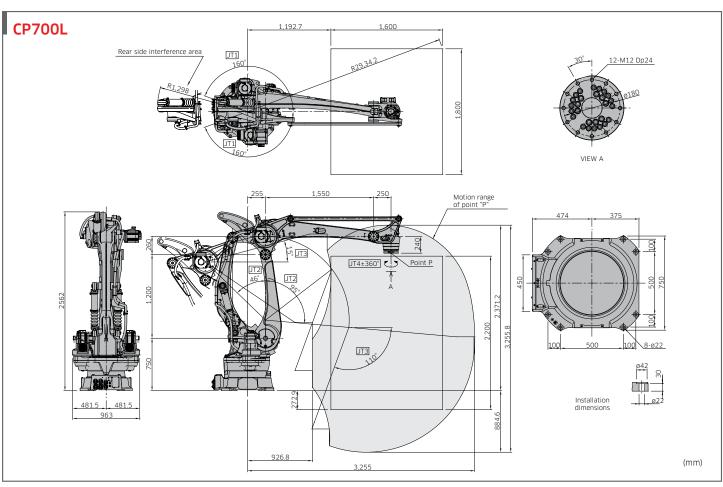

E series

The E Controller combines high performance, unprecedented reliability, a host of integrated features and simple operation, all in a compact design.

Features

Compact

The overall volume of the EO3 controller for CP series palletizing robots has been reduced. The small footprint of this compact controller allows for installation in "highdensity" applications. For further space saving options, an up-right position or stacked installation is possible, without impending performance.

User-friendly operation

The easy-to-use teach pendant now incorporates motor power and cycle start at your fingertips. Multiple information screens can be displayed simultaneously. The intuitive teaching interface is simple to use.

Programming ease & flexibility

A rich set of programming functions come standard with the E Controller to support a wide range of applications. Functions can be combined and easily configured within a system to suit a particular application. Also, the powerful Kawasaki AS Programming Language provides sophisticated robot motion and sequence controls.

Advanced technologies

The enhanced CPU capacity allows for more accurate trajectory control, faster program execution, and quicker loading and saving of files. In addition, memory has been expanded to meet the need for higher program storage capacity. The controller comes equipped with a USB port for external storage devices.

Easy maintenance


Modular components with limited cables translate into easy diagnostics and maintenance. A host of maintenance functions are available, including self-diagnostics on hardware and application errors to minimize troubleshooting and reduce MTTR (Mean Time To Repair). Remote diagnostics via the web server function enables service support from anywhere in the world.

Space and energy saving

The CP series E03 controller is only 25% of the standard palletizing controller size (41% with transformer unit) and fits under conveyors and other equipment. The E03 controller generates electric power while in a deceleration mode, reducing energy consumption and minimizing CO₂ emissions.





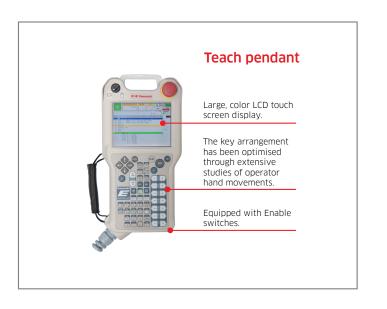

Specific	ations							
		Standard		Standard			Option	
America	America				E33		E33	
Europe		E03		E43		E03	E43	
Japan & Asia			E23				E23	
Dimensions (mm)		W550 × D580 × H278	W630 × D550 × H950	W730 × D550 × H1,200		Transformer unit: W580 × D580 × H178		
Structure		Enclosed structure / Indirect cooling system	Enclose	Enclosed structure / Indirect cooling system				
Number of controlled axes		5		5		6	E33: 8 E43: 8 E23: 7	
Drive system		Full digital servo system		Full digital servo system				
Coordinate systems		Joint, Base, Tool		Joint, Base, Tool		Fixed tool point		
Types of motion control		Joint / Linear / Circular interpolated motion	Joint /	Joint / Linear / Circular interpolated motion				
Programming		Point to point teaching or language based programming	Point to poir	Point to point teaching or language based programming				
Memory o	apacity (MB)	8		8				
General	External operation	Motor power off, Hold		Motor power off, Hold				
purpose	Input (channels)	32		32		Max. 96	Max. 128	
signals	Output (channels)	32		32			Max. 128	
Operation panel		E-Stop switch, Teach/repeat switch, Control power light	E-Stop switch, Teach/repeat switch, Control power light	E-Stop switch, Teach/repeat, rapid-feed check switch, Control power light	E-Stop switch, Teach/repeat switch, Control power light	Rapid-feed check mode switch	Cycle start switch, Motor-on switch, Hold/run switch, Error light, Error reset switch, Rapid-feed check mode switch (only on E23)	
Cable	Teach pendant (m)	5		5		10, 15		
length	Robot-controller (m)	5		5		10, 15		
Mass (kg)		45	110	195		Transformer unit: 45		
Power requirements		AC200-220V ±10%, 50/60Hz, 3ø	AC200-220V ±10%, 50/60Hz, 3ø	AC380-415V ±10%, 50/60Hz, 3ø	AC440-480V ±10%, 60Hz, 3ø	Transformer unit: AC380-415V ±10% or AC440-480V ±10% 50/60Hz, 3ø	E33 AC200-220V / AC380-415V / AC515V / AC575V / AC440-480V ±10% 50/60Hz, 3ø	
		Class-D earth connection (Earth connection dedicated to robots), Leakage current: Maximum 100mA		Class-D earth connection (Earth connection dedicated to robots), Leakage current: Maximum 100mA				
Environmental Ambient temperature (°C)		0 - 45		0 - 45				
conditions	Relative humidity (%)	35 - 85 (no dew, nor frost allowed)	35	35 - 85 (no dew, nor frost allowed)				
Body color		Munsell 10GY9/1 equivalent		Munsell 10GY9/1 equivalent				
Teach pendant		TFT color LCD display with touch-panel, E-Stop switch, Teach lock switch, Enable switch		TFT color LCD display with touch-panel, E-Stop switch, Teach lock switch, Enable switch				
Auxiliary storage unit		-		-			USB memory	
Interface		USB, Ethernet (100BASE-TX), RS-232C	USE	USB, Ethernet (100BASE-TX), RS-232C				

10





This software lets you configure the pick and place positions of the workpieces by robots and register workpieces, pallets, and stacking patterns displayed on your computer's screen. It also allows you to easily create robot operation programs .


This optional software is one of the application programs built on K-ROSET, Kawasaki's offline teaching software.

- OS environment: Windows 7/10 (x86, x64)
- On a 64-bit computer, it runs in the 32-bit compatible mode.

Easy setup by layout selection


Support for up to three pick positions and four place positions of workpieces by robots.

Simply select a layout and enter a distance!

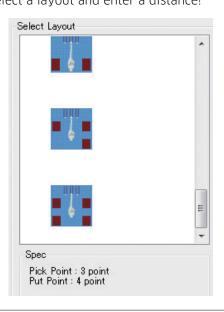


K-ROSET functions can be used


With K-ROSET, users can specify the layout by analyzing the installation positions automatically according to the robot types and place positions. You can also check for interference and perform cycle time analysis.

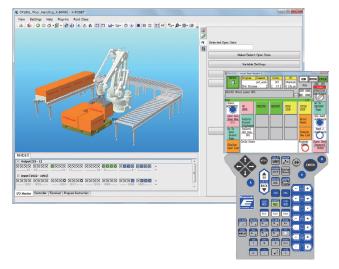

Easy registration of item types

Item types are registered simply by entering data on your computer for workpieces, pallets, and stacking patterns.

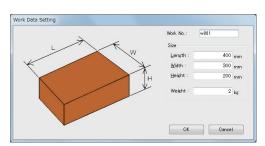

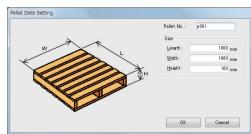

Support for many kinds of stacking patterns

Approximately 200 types of base patterns can be configured for each stage.

The place position of workpieces can be specified. Gaps can also be adjusted.

