

Kawasaki Heavy Industries, Ltd

Robot Business Division

Tokyo Head Office/Robot Division

1-14-5, Kaigan, Minato-ku, Tokyo 105-8315, Japan
Phone: +81-3-3435-2501 Fax: +81-3-3437-9880

Akashi Works/Robot Division

1-1, Kawasaki-cho, Akashi, Hyogo 673-8666, Japan
Phone: +81-78-921-2946 Fax: +81-78-923-6548

Nishi-Kobe Works/Robot Division

234, Matsumoto, Hasetani-cho, Nishi-ku, Kobe, Hyogo 651-2239, Japan
Phone: +81-78-915-8136 Fax: +81-78-915-8274

Kawasaki Robotics website

<https://kawasakirobotics.com/>



Kawasaki Robostage (showroom)

<https://kawasakirobotics.com/jp-sp/robostage/en/>



Global Network

Kawasaki Robotics (USA), Inc.

28140 Lakeview Drive, Wixom, MI 48393, U.S.A.
Phone: +1-248-446-4100 Fax: +1-248-446-4200

Kawasaki Robotics (UK) Ltd.

Unit 4 Easter Court, Europa Boulevard, Westbrook
Warrington Cheshire, WA5 7ZB, United Kingdom
Phone: +44-1925-71-3000 Fax: +44-1925-71-3001

Kawasaki Robotics GmbH

Im Taubental 32, 41468 Neuss, Germany
Phone: +49-2131-34260 Fax: +49-2131-3426-22

Kawasaki Robotics Korea, Ltd.

NO. 6-10, 14th floor, 1dong, 135, Gasan digital 2-ro,
Geumcheon-gu, Seoul, Republic of Korea
Phone: +82-32-821-6941 Fax: +82-32-821-6947

Kawasaki Robotics (Tianjin) Co., Ltd.

1-2/F, Building 6, No.19 Xinhuan Road, TEDA, China
Phone: +86-22-5983-1888 Fax: +86-22-5983-1889

Taiwan Kawasaki Robot Center

3F, No.31, Ln.216, Gongyuan Rd., Hsinchu City
30069, Taiwan(R.O.C)
Phone: +886-3-562-0518

Kawasaki Motors Enterprise (Thailand) Co., Ltd.

(Rayong Robot Center)
119/10 Moo 4 T.Pluak Daeng, A.Pluak Daeng, Rayong 21140
Thailand
Phone: +66-38-955-040-58 Fax: +66-38-955-145

Singapore Kawasaki Robot Center

100G Pasir Panjang Road #06-10
Singapore 118523
Phone: +65-6513-3145

Kawasaki Robotics India Pvt. Ltd.

1/5, Village-Khandsa, Khasra No. 1364,599/2/2/1,
Hero Honda Chowk, Gurgaon-122001, Haryana
Phone: +91-124-608-5500




CAUTIONS TO BE TAKEN TO ENSURE SAFETY

- For those persons involved with the operation / service of your system, including Kawasaki Robot, they must strictly observe all safety regulations at all times. They should carefully read the Manuals and other related safety documents.
- Products described in this catalogue are general industrial robots. Therefore, if a customer wishes to use the Robot for special purposes, which might endanger operators or if the Robot has any problems, please contact us. We will be pleased to help you.
- Be careful as Photographs illustrated in this catalogue are frequently taken after removing safety fences and other safety devices stipulated in the safety regulations from the Robot operation system.

 **neoROSET**

Robot programming support software

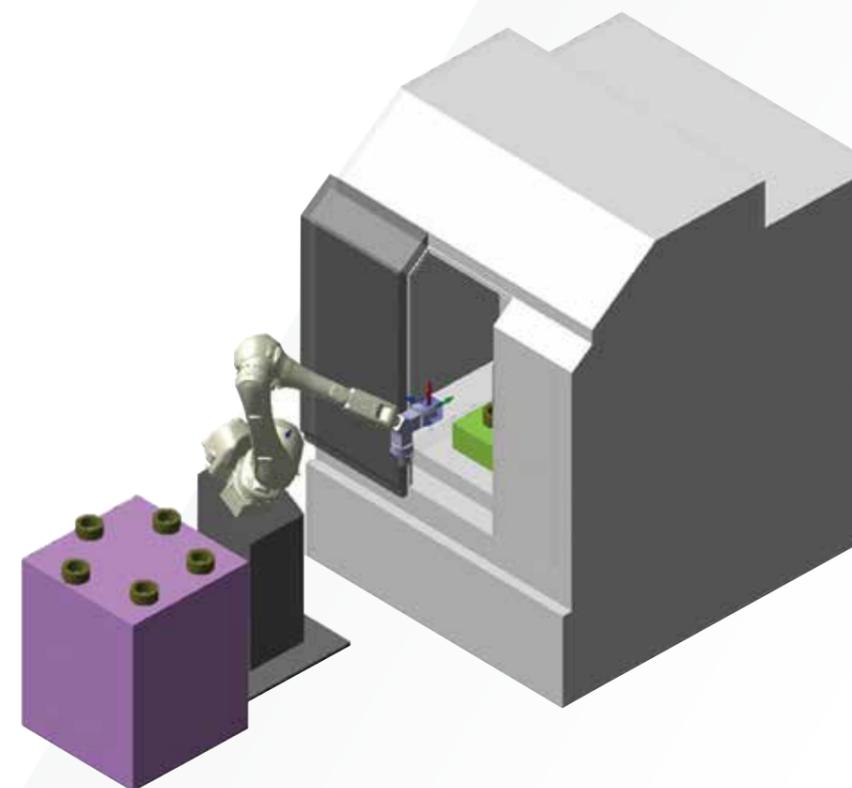


Robot programming support software

neoROSET is a programming tool that enables robot programming and accurate simulation on a PC.
By performing offline verification in advance, risks that may be concerned about introducing a robot system can be reduced.




Flow of using the system

neoROSET provides maximum effectiveness with simple operation.

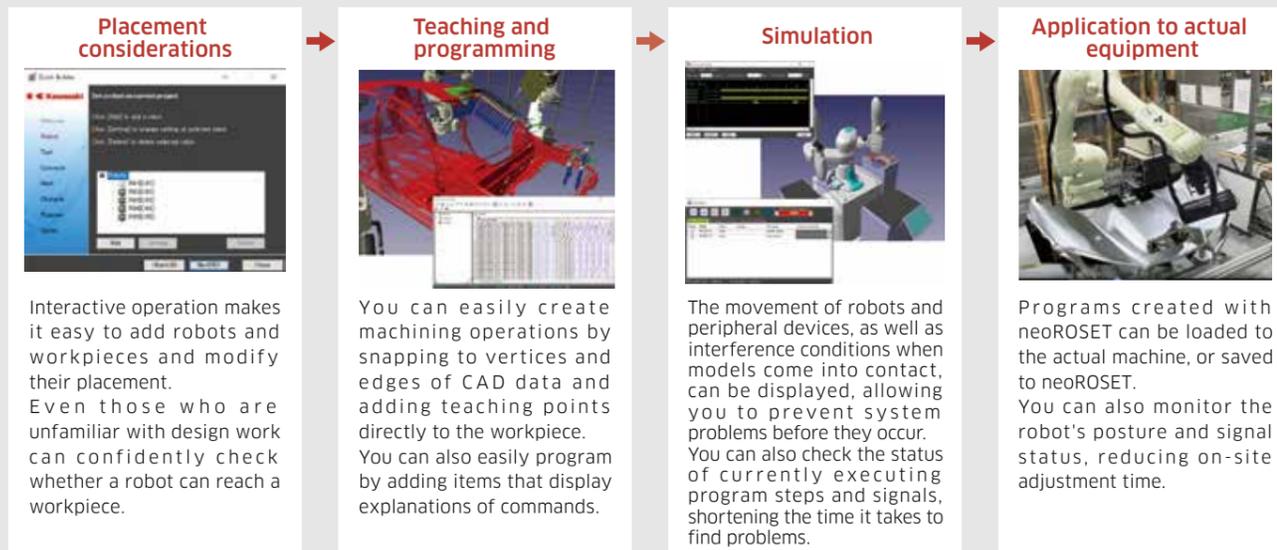

Dramatically reduces teaching time

By using neoROSET, the time required for conventional offline teaching and adjustment can be reduced to a fraction or even up to one-tenth.

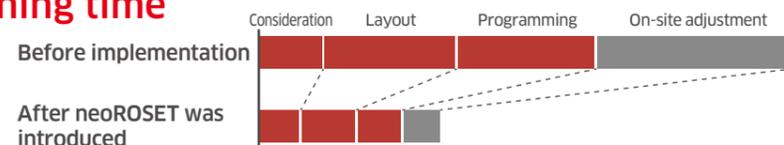

"neoROSET" has the solution!

Increased on-site man-hours due to interference checks and cycle time mismatches

After introduction

You can check the layout through prior simulation!

Teaching/checking on the actual machine results in longer downtime

After introduction

You can check the results without stopping the actual machine by performing a preliminary simulation!

neoROSET Why choose neoROSET?

By using neoROSET, the difficulty of operation is reduced, standard support for reading CAD files is enhanced, and costs can be significantly reduced by shortening the required time and improving efficiency.

Traditionally

Difficulty in operation



File format restrictions




neoROSET

Simple and intuitive user interface





Standard support for reading CAD files

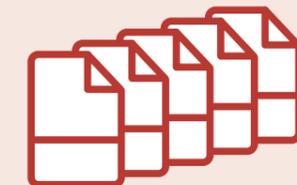


01. Accurate movement trajectory and tact time

The virtual robot controller technology that Kawasaki has developed over many years enables highly accurate reproduction of movement trajectories and tact times.

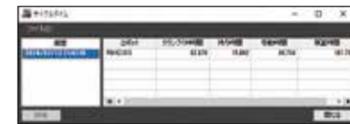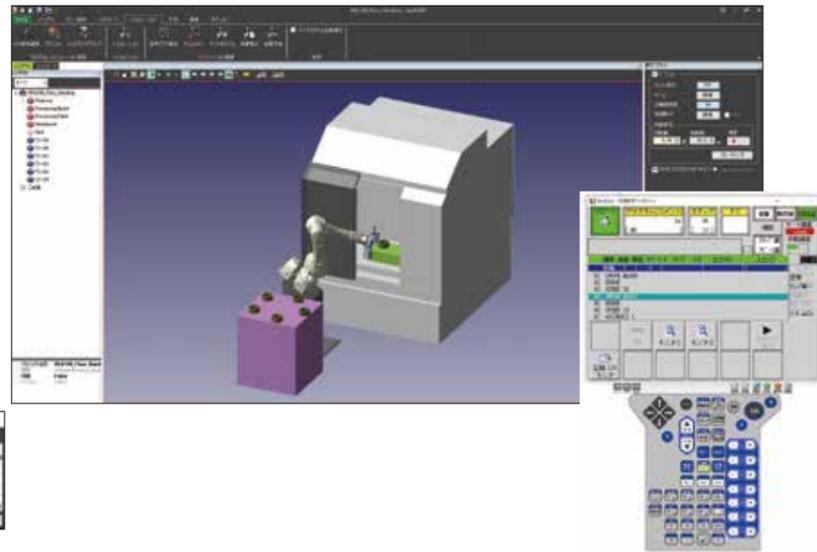


05. AS Language Editor

This is an editor that allows you to easily create Kawasaki robot language programs in conjunction with a graphic screen.

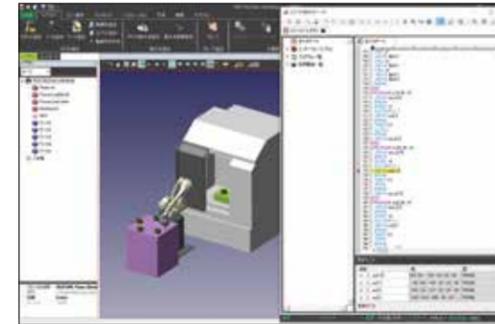


06. Display of processing results

The trajectory of the machining results when welding or painting commands are executed can be displayed separately from the air cutting operation.

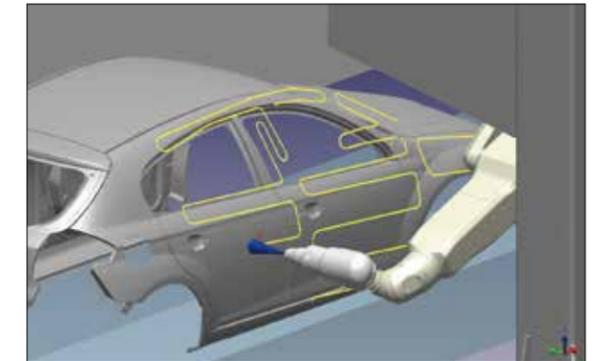


02. Supports multiple robots and external axes

You can simulate multiple robots with different controllers at the same time. You can also freely reproduce external axes controlled by the robot controller.

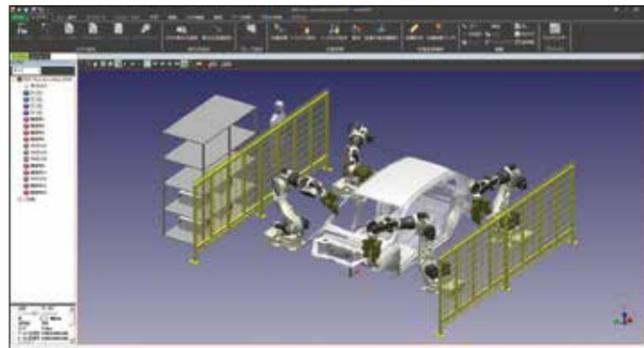


Create robot programs visually using a simple, intuitive user interface graphic screen.

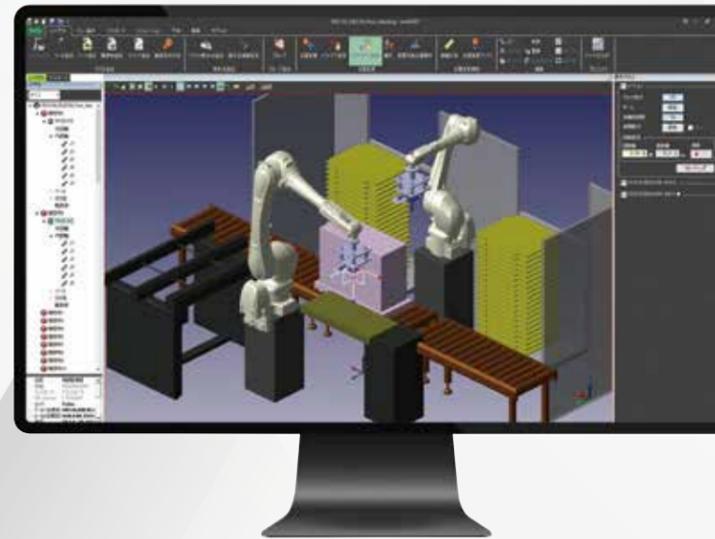


07. 3D PDF Creation

The actions during the simulation can be output to a file and played back in 3D using a standard PDF reader, making it useful for presentations and information sharing.

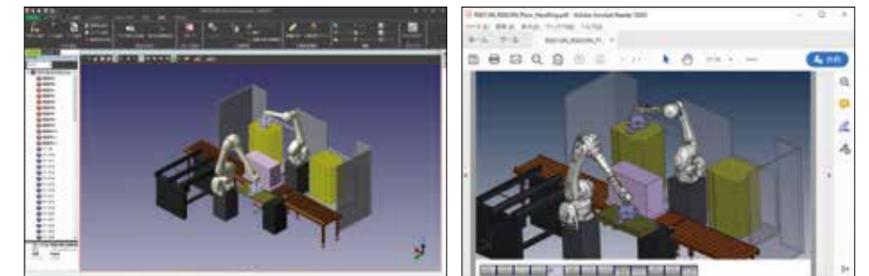


03. Interference check, layout verification

Before installing it on the actual device, you can check in advance whether there are any interference or operating range problems on your PC.

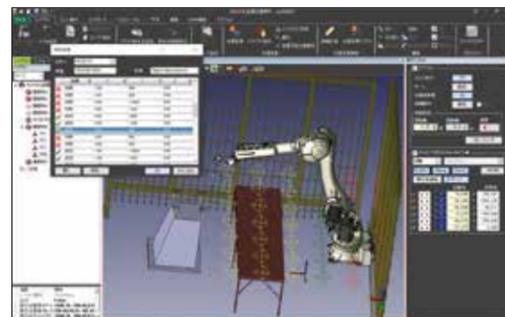

04. Easy to use

You can intuitively change the layout position and robot posture by using the mouse.

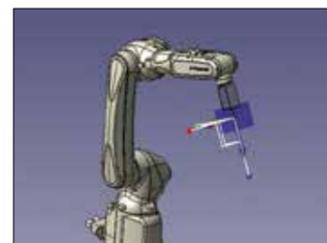


09. CAD File Import

It supports importing many types of CAD files as standard, which is useful for layout construction and CAD teaching.

Format	
STEP	CATIA
IGES	SolidWorks
ACIS	Inventor
DXF	Pro/E
DWG	Solid Edge
JT	Rhinoceros
Parasolid	NX

08. Line Teaching Function

By selecting lines or surfaces on the workpiece, the line teaching function enables batch generation of teaching points at equal intervals along the line, using the surface normal direction as the reference.

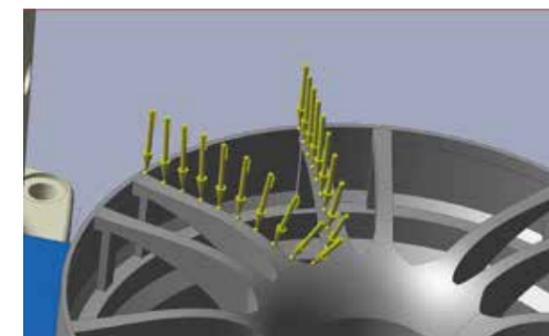

CAD formats are supported as standard!

neoROSET can import data from many commonly used 3D CAD programs and use it to create programs.


This allows you to build an environment where CAD data and robots can be used, seamlessly connecting the design department and the manufacturing site. In addition, it is backward compatible with the conventional software K-ROSET, and can load K-ROSET projects. *Supported CAD formats are updated from time to time.

CAD Format	
Format	Extension
CATIA V5	CATProduct
	CATPart
CATIA V4	model
SolidWorks	sldasm
	sldprt
Pro/E	asm
	prt
Rhinoceros	3dm
Autodesk Inventor	ipt
	iam
SolidEdge	par
	asm
	psm
NX	prt

Standard Format	
Format	Extension
ACIS	sat
	sab
IGES	iges/igs
STEP	step/stp
DXF	dxf
DWG	dwg
JT	jt
Parasolid	x_t
	X_b
STL	stl


Licensing method

Node-Locked License

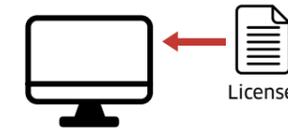

A license will be issued to the PC that uses neoROSET.

Floating License

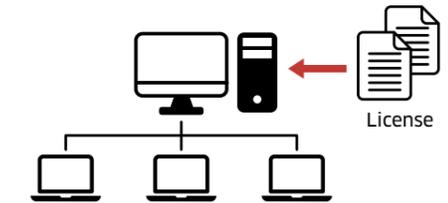


A license will be issued to the license management PC. Any PC connected on the network can use neoROSET.

Operating environment

Item	Contents
Operating System (OS)	Windows® 11 Pro x64/Windows® 11 Enterprise x64 Japanese version / English version / Chinese version / German version
CPU	Intel Core i5 or higher recommended
Memory	Minimum 8GB RAM, 16GB or more recommended
Free space	30GB or more, Solid State Drive (SSD) recommended
Resolution	1920 x 1080 or higher recommended
Video card	Intel UHD Graphics or higher NVIDIA Quadro series recommended
Other requirements	Mouse (with wheel recommended) or equivalent pointing device PDF Reader such as Adobe® Acrobat® Reader


Visualization of on-site systems

By loading the save data from the actual robot controller, you can recreate the on-site system on neoROSET. You can check the robot coordinates and teaching point positions that cannot be seen in real life.

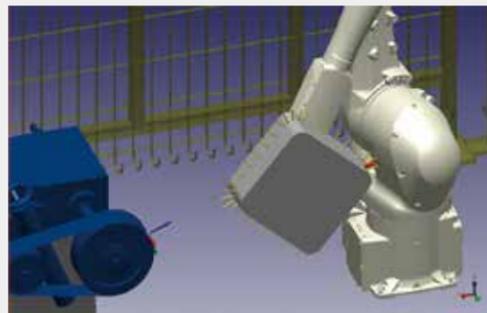

Extensive conversion functions

Teaching points can be converted using the shift and mirror copy functions, which helps with program correction work during on-site adjustments. In addition, by replacing robot models, model selection can be easily performed when updating aging robots.

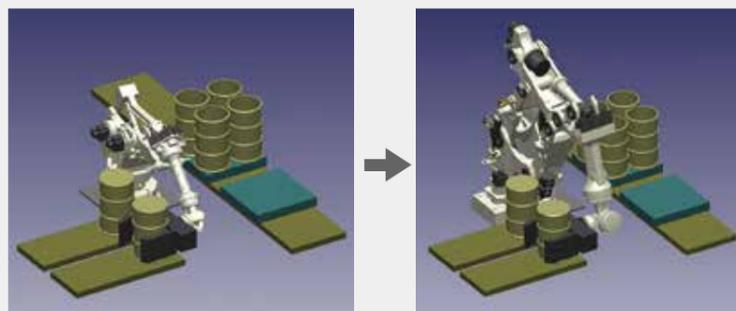

Robot School neoROSET Course Now Open!

A new neoROSET course has been added to the Robot School curriculum. We offer training programs tailored to our customers' specific needs.

- This course is for creating programs and simulations using the offline programming software "neoROSET".
- It is recommended that trainees have practical experience using industrial robots or have taken basic (instructional) training before taking this course.
- Since this is not a special education course, we do not issue a certificate of completion.
- On-site schooling at the customer's workplace is also available, so please consult with us.



For more details